




160/00

(Z)



2

(V)







1

(X)






1

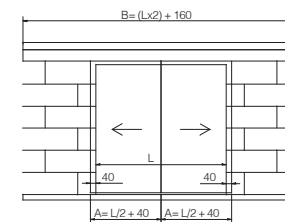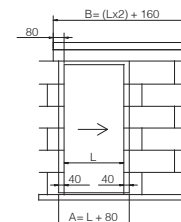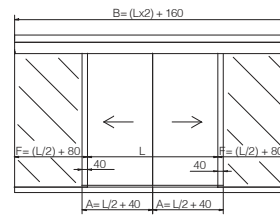
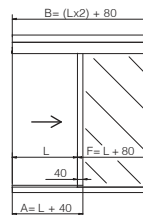


Assemblaggio a soffitto - Montaje a techo - Assembly to ceiling


Montaggio pinza - Montaje pinzas - Clamps assembly

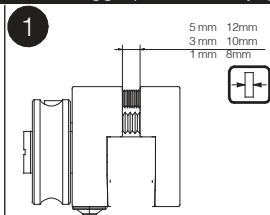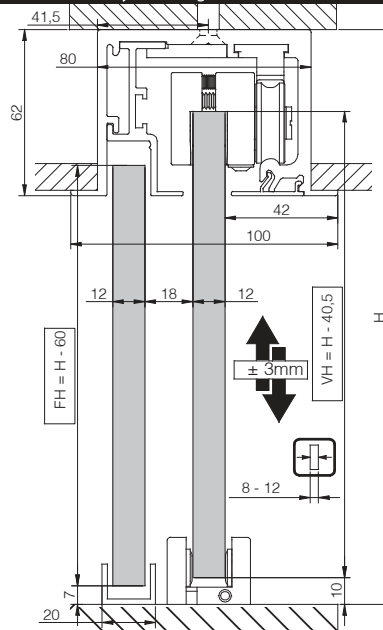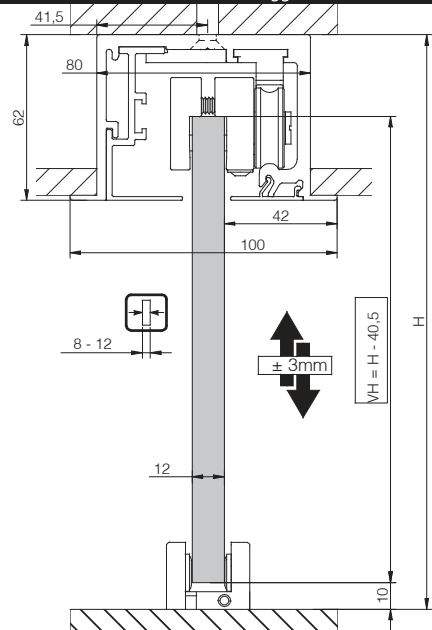






2 PARALLELE
PARALLEL
PARALELOS

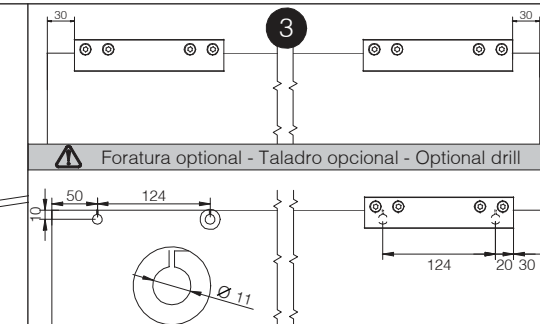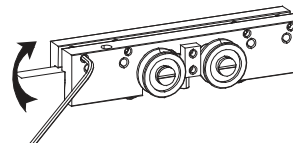


Foratura optional - Taladro opcional - Optional drill

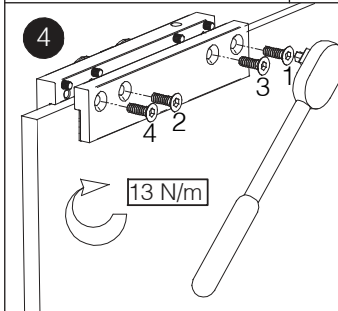

5 ! INSERIRE FERMI PORTA PRIMA DI FISSARE IL BINARIO
INSERTAR LOS TOPE FRENOS ANTES DE FIJAR EL PERFIL
INSERT THE STOPPER BEFORE FIXING THE TRACK

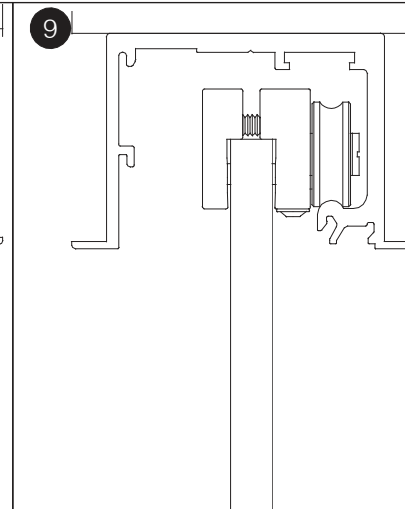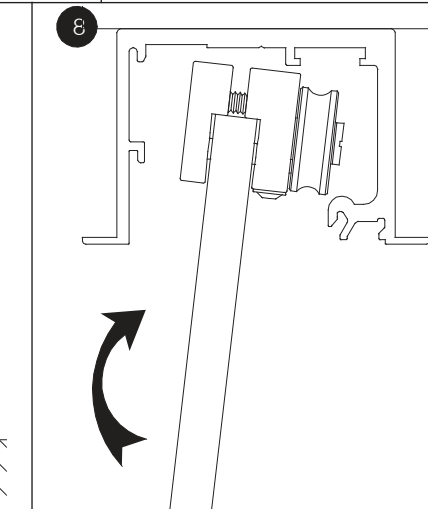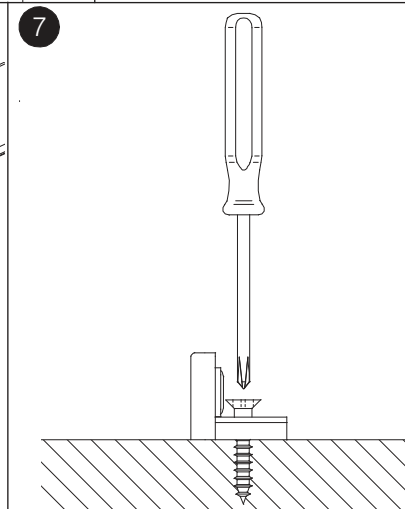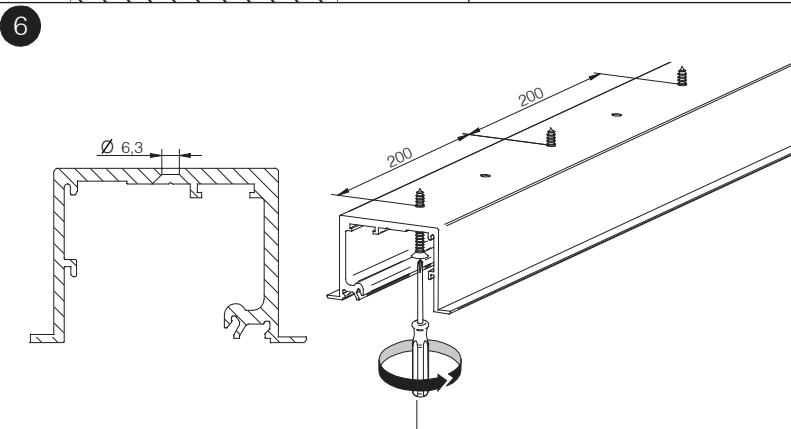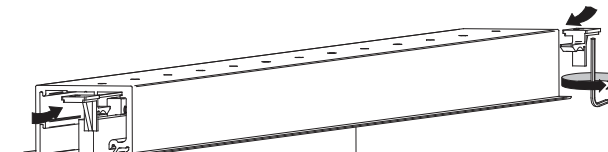

Foratura diversa con Softbrake
Different drill with Softbrake
Taladro diferente con Softbrake

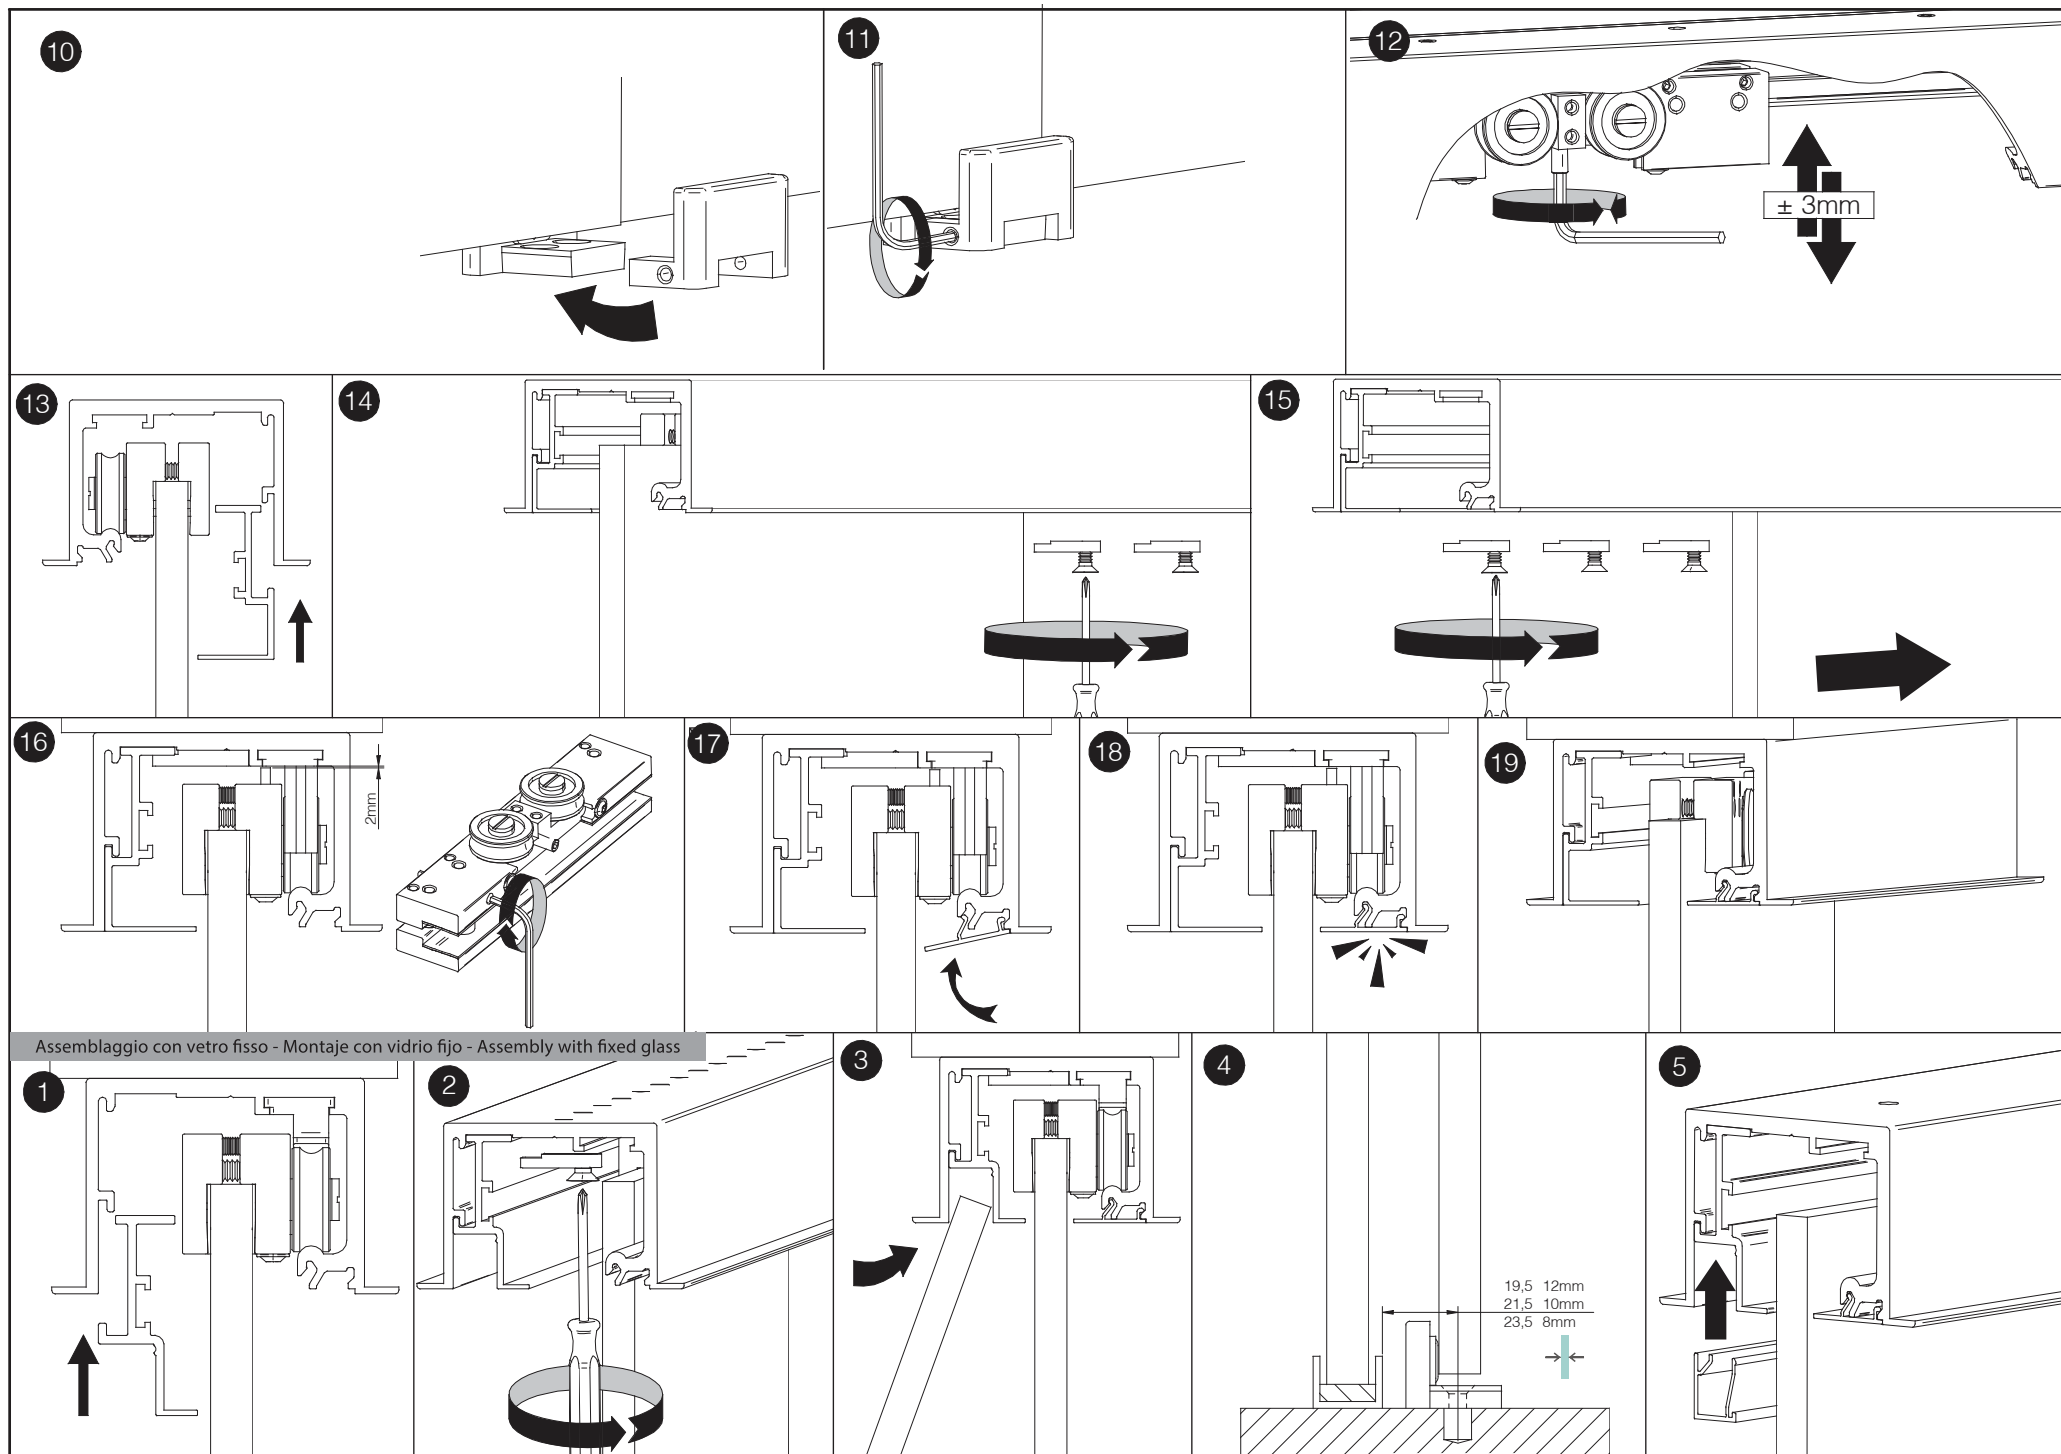



150 kg
8 > 13.52 mm
70 - 90 kg
21 mm
± 5 mm

Anta minima / Hoja minima con 1 Stop&Slide

75 kg **585 mm**
90 kg **610 mm**

Anta minima / Hoja minima con 2 Stop&Slide

70 kg **830 mm**
90 kg **880 mm**

