


ISTRUZIONI DI MONTAGGIO

INSTRUCCIONES DE MONTAJE

ASSEMBLY INSTRUCTIONS

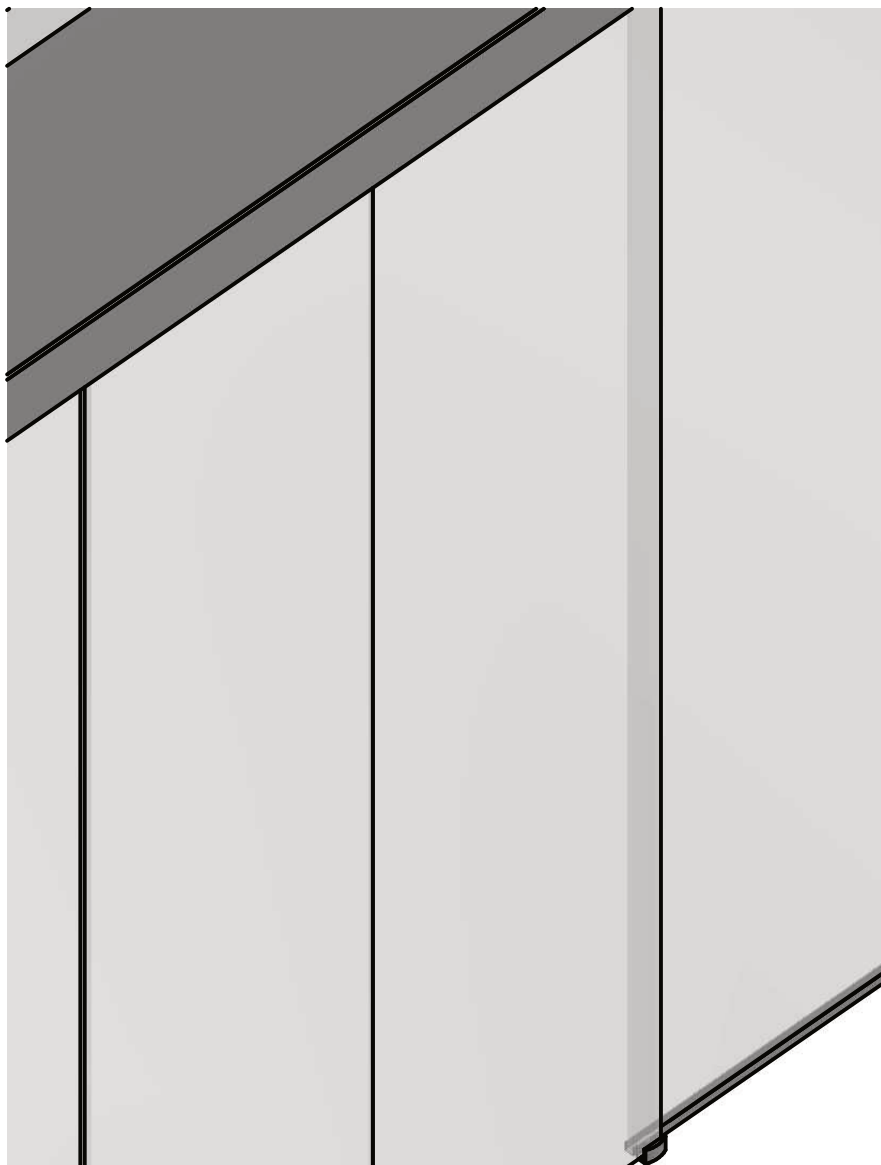

120 kg



8 > 12.76 mm



65 - 90 - 120 kg



16 mm




± 3 mm

Ante singole / con vetro fisso
Fissaggio a parete / a soffitto

Hojas correderas / con vidrio fijo
Montaje a pared / a techo

Single doors / with fixed glass
Wall / Ceiling assembly


Attrezzi richiesti / Herramientas necesarias / Required tool

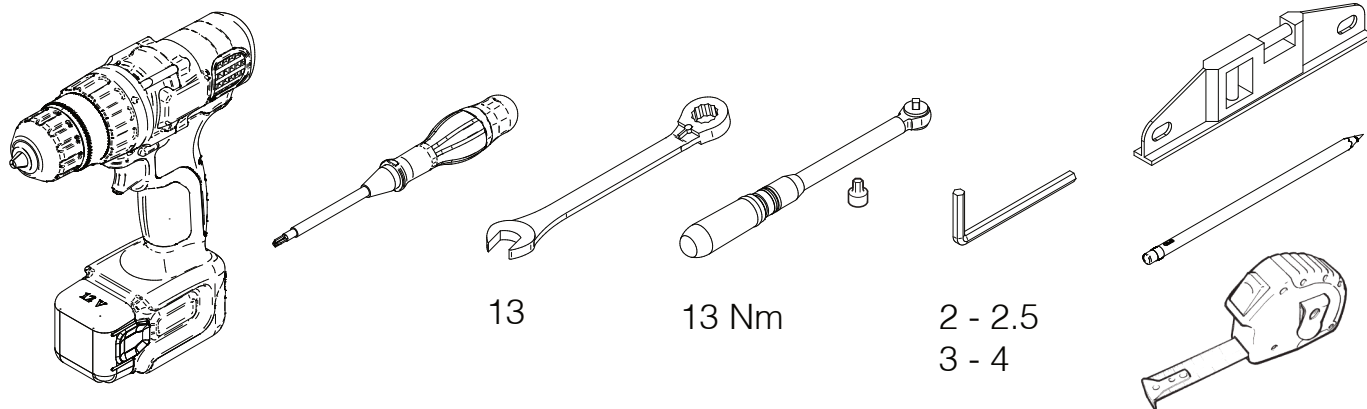


Pulire il vetro ed i profili prima dell'installazione.
Limpiar el cristal y los perfiles antes de la instalación.
Clean the glass and profiles before installing.

Componenti - Componentes - Components


2x
100010555

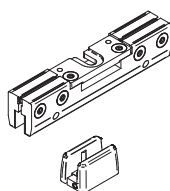


100015573



PRK-CAR

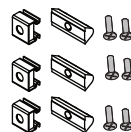

PRK-FIXKIT

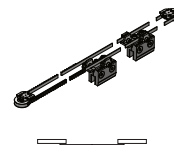

PRK-SINC

Stop&Slide
optional



Misura minima anta
Ancho mínimo de hoja
Minimum width panel



65 kg




90 kg



120 kg

580 mm



PRKSES65
PRKCAR

640 mm



PRKSES90
PRKCAR

700 mm




PRKSES120
PRKCAR


PROFILI - PERFILES - PROFILES

PRK-TOP	PRK-FIX	PRK-TFX	PRK-COH	87/X4
				Optional

Fissaggio a soffitto 2 ante + fisso
Montaje a techo - 2 puertas correderas + fijo
Ceiling mounting - 2 sliding doors + fixed glass

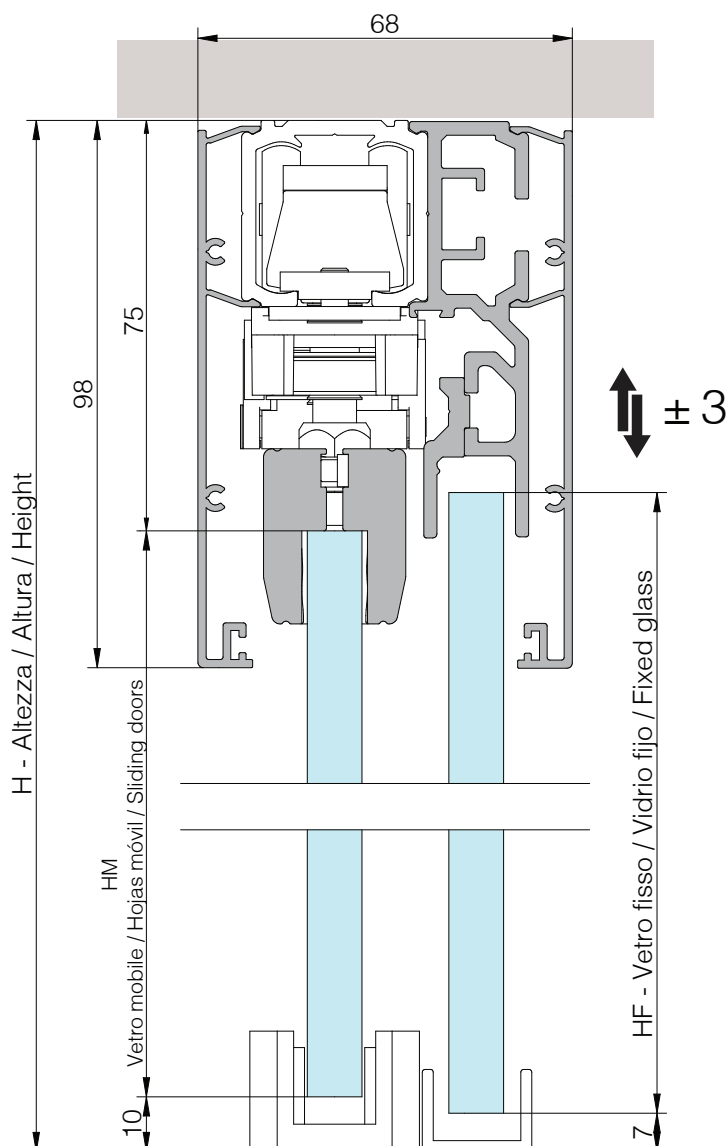



Fissaggio a parete 2 ante
Montaje a pared - 2 puertas correderas
Wall mounting - 2 sliding doors

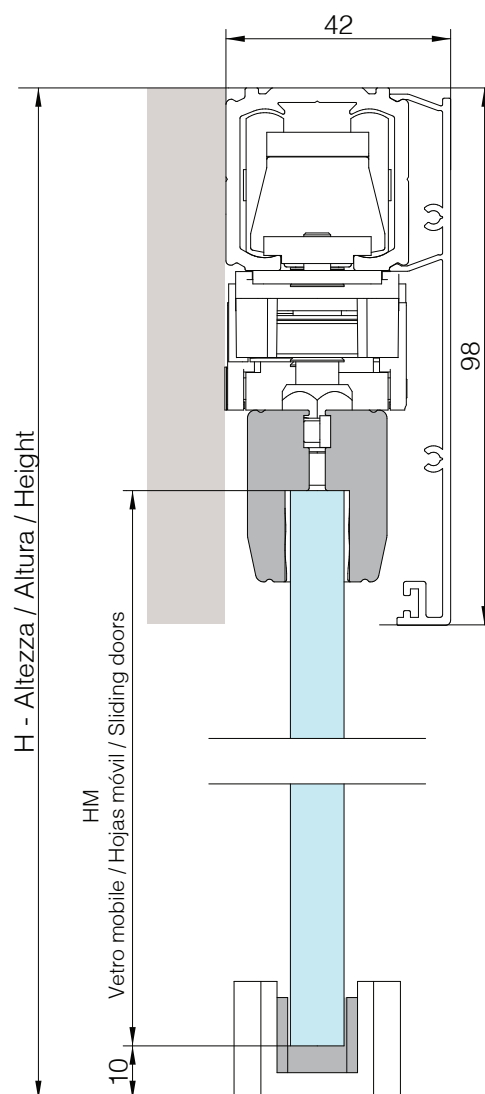


PRATIK SINCRO

$$HM = H - 85$$

$$HF = H - 75$$

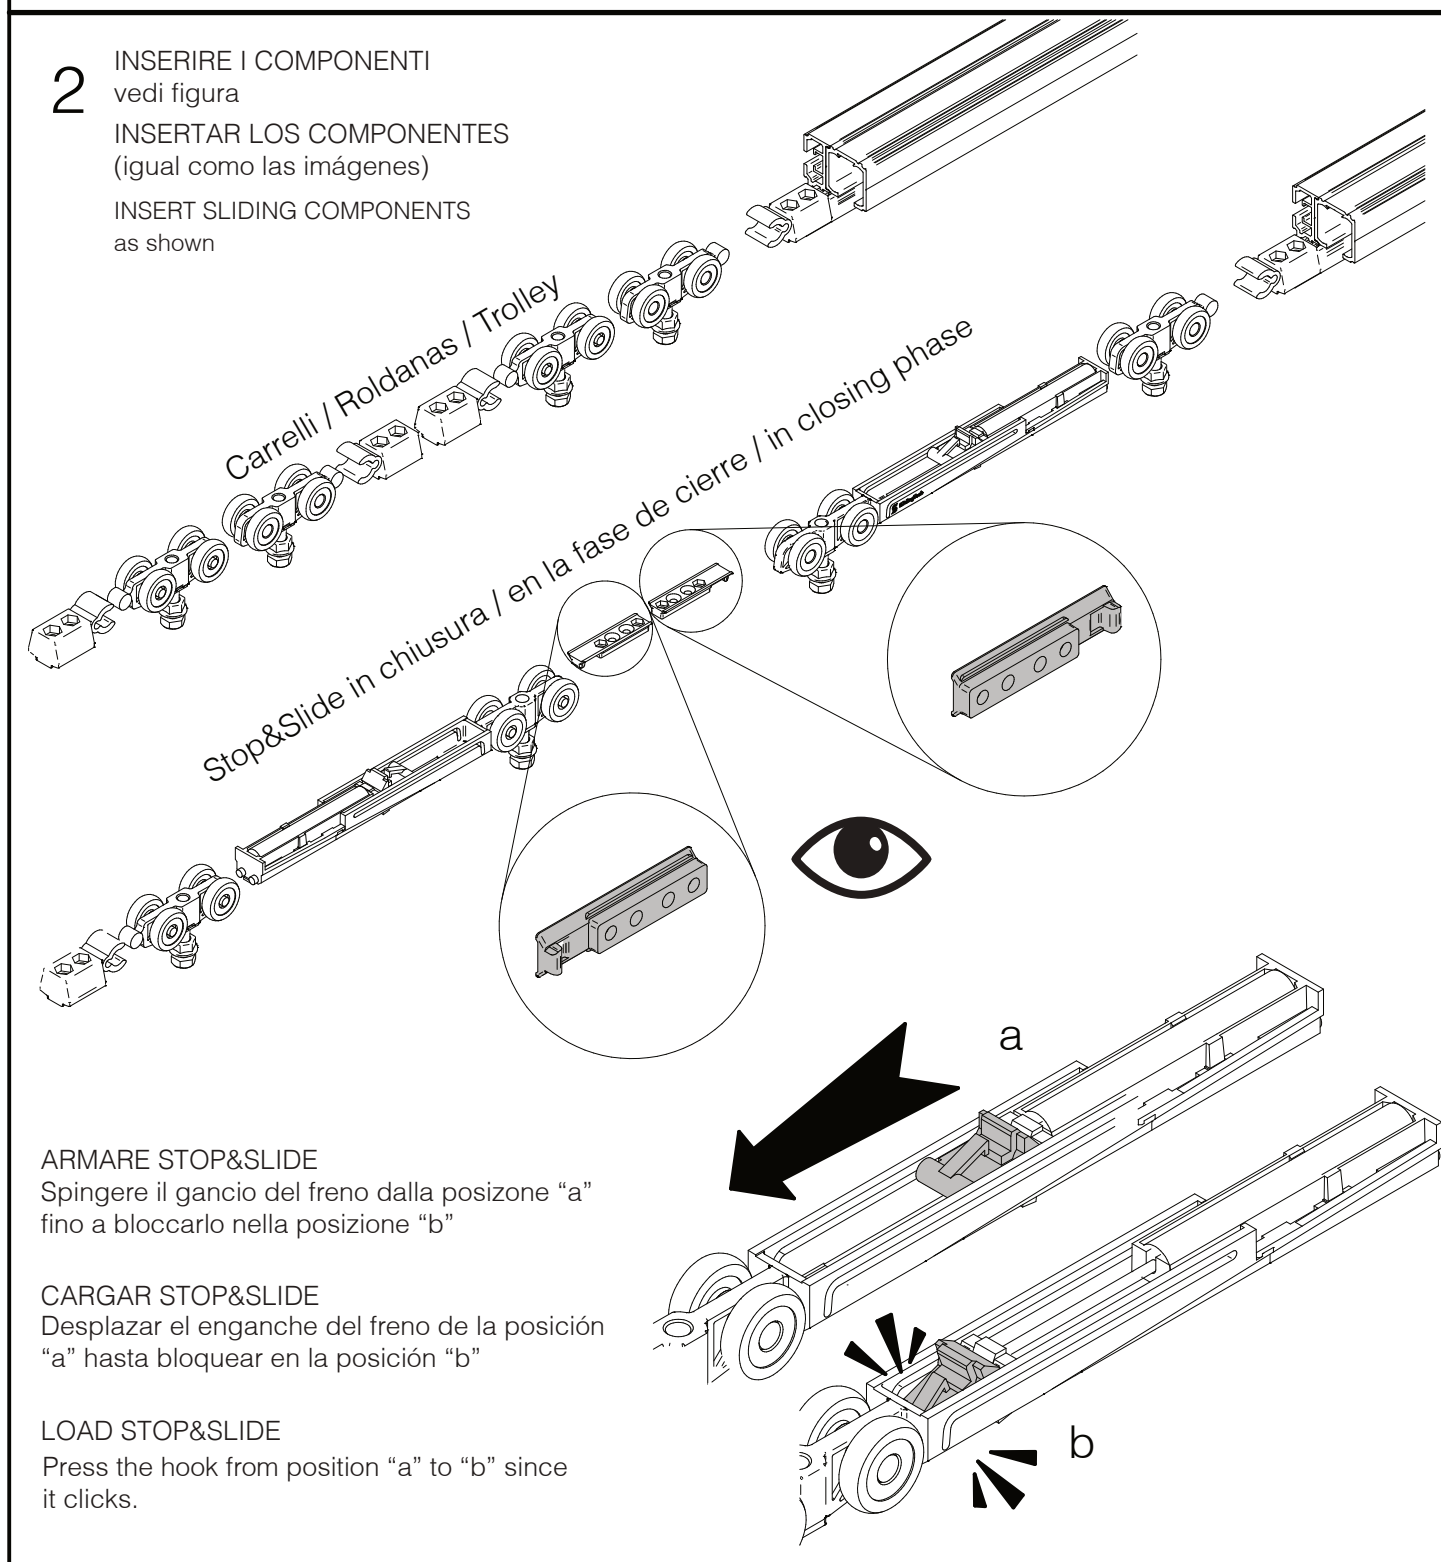
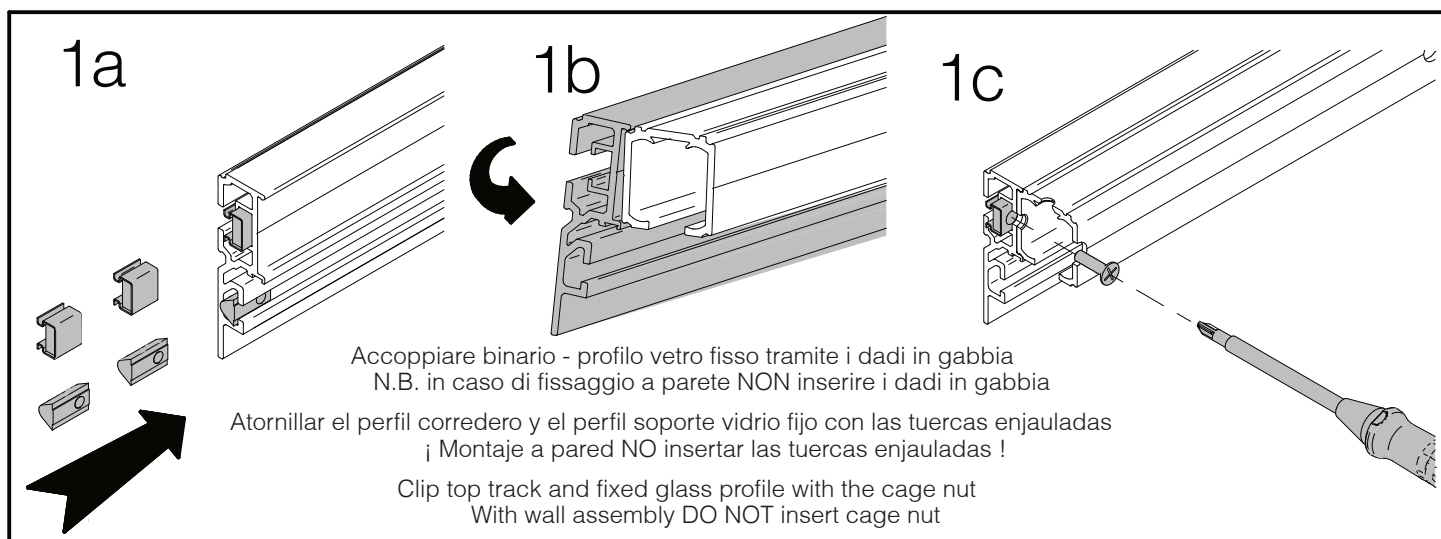


3 Attacco a parete Montaje a pared Wall assembly

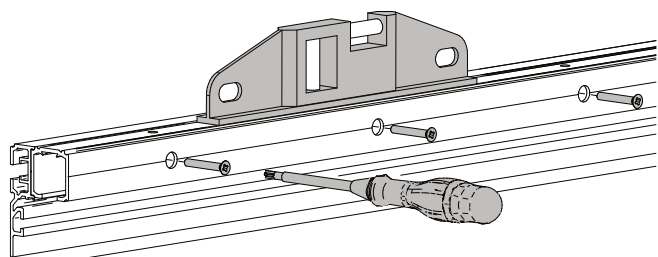


N.B. in caso di montaggio a parete NON inserire i dadi in gabbia per unire il binario con il profilo vetro fisso
¡ Montaje a pared NO insertar las tuercas enjauladas !
With wall assembly DO NOT insert cage nut



Attacco a soffitto Montaje a techo Ceiling assembly

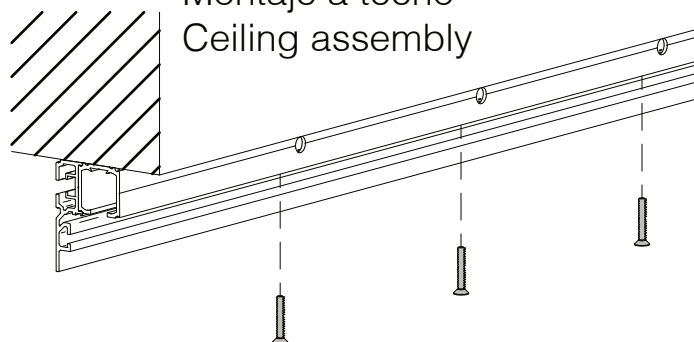

4a

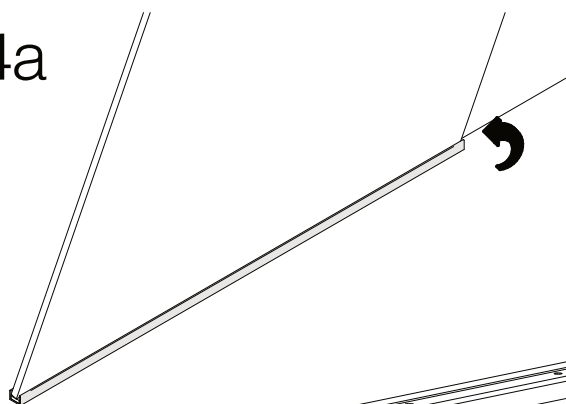

4b

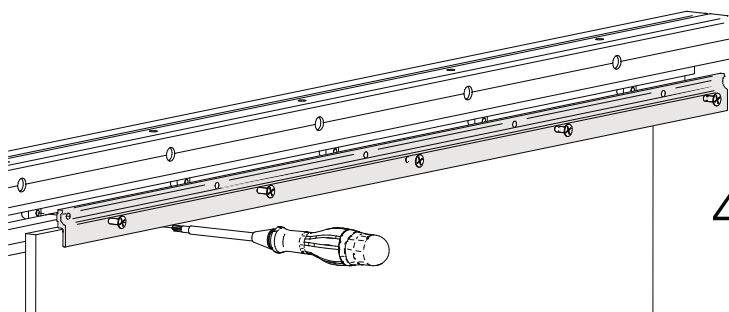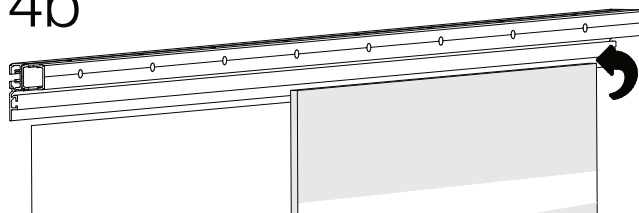

4c

MONTAGGIO VETRO FISSO / MONTAJE VIDRIO FIJO / ASSEMBLY FIXED GLASS


5

Montaggio pinza EASY™ - Montaje pinzas EASY™ - EASY™ Clamps assembly


Selezionare il distanziale in base allo spessore del vetro ed inserirlo/i come in figura

Elegir los separadores según el grosor del cristal y ponerlo en la pinza, siempre quedando a la vista el número del grosor que deseamos (igual como en las imágenes).


Choose the spacer according to the thickness of the glass and match in the clamp

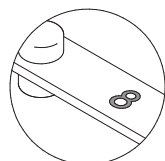


VETRO 8 MM

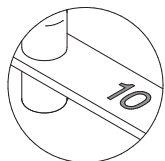


VETRO 10 MM

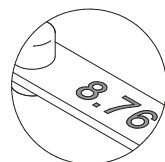

VETRO 8,76 MM

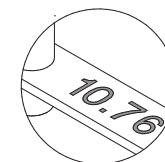


VETRO 10,76 MM

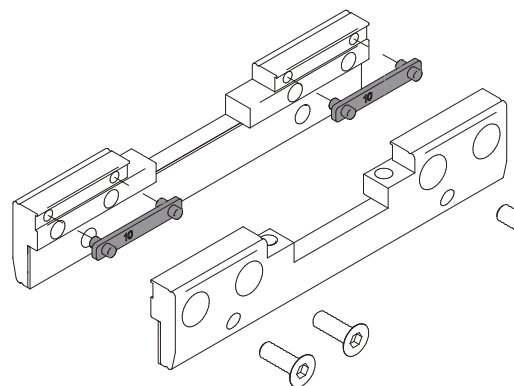


6 Serrare le pinze Atornillar las pinzas Tighten the clamp

Anta sinistra / Hoja izquierda / Left panel


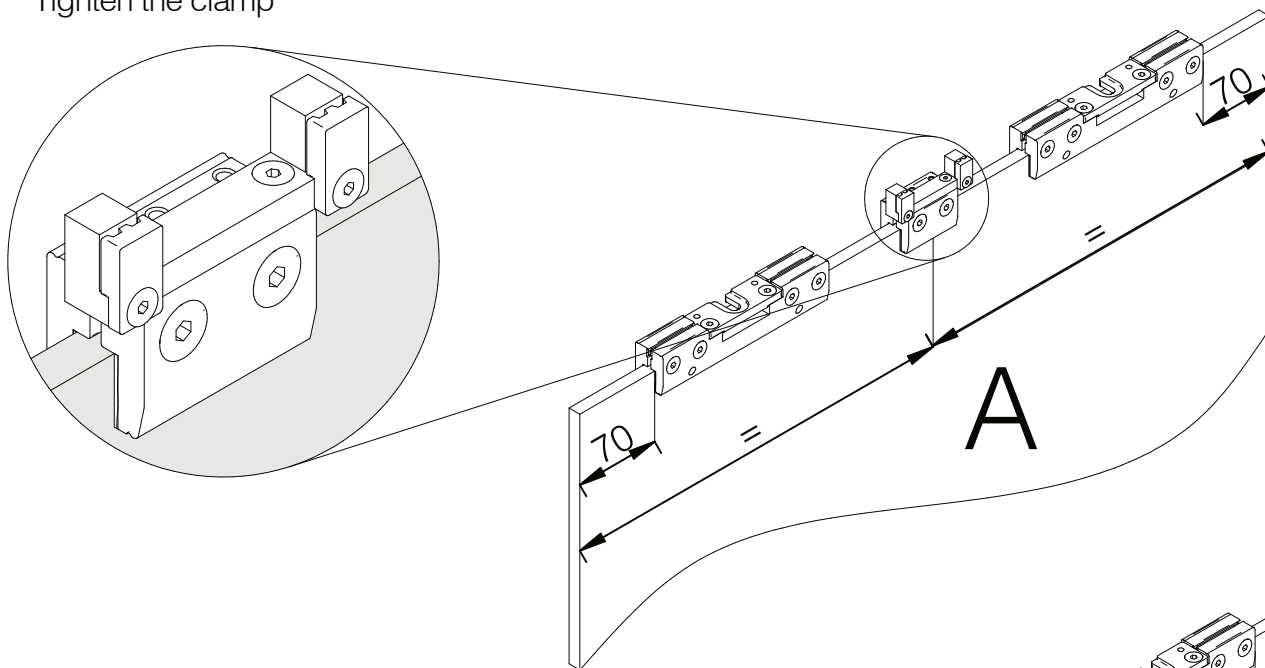


Anta destra / Hoja derecha / Right panel

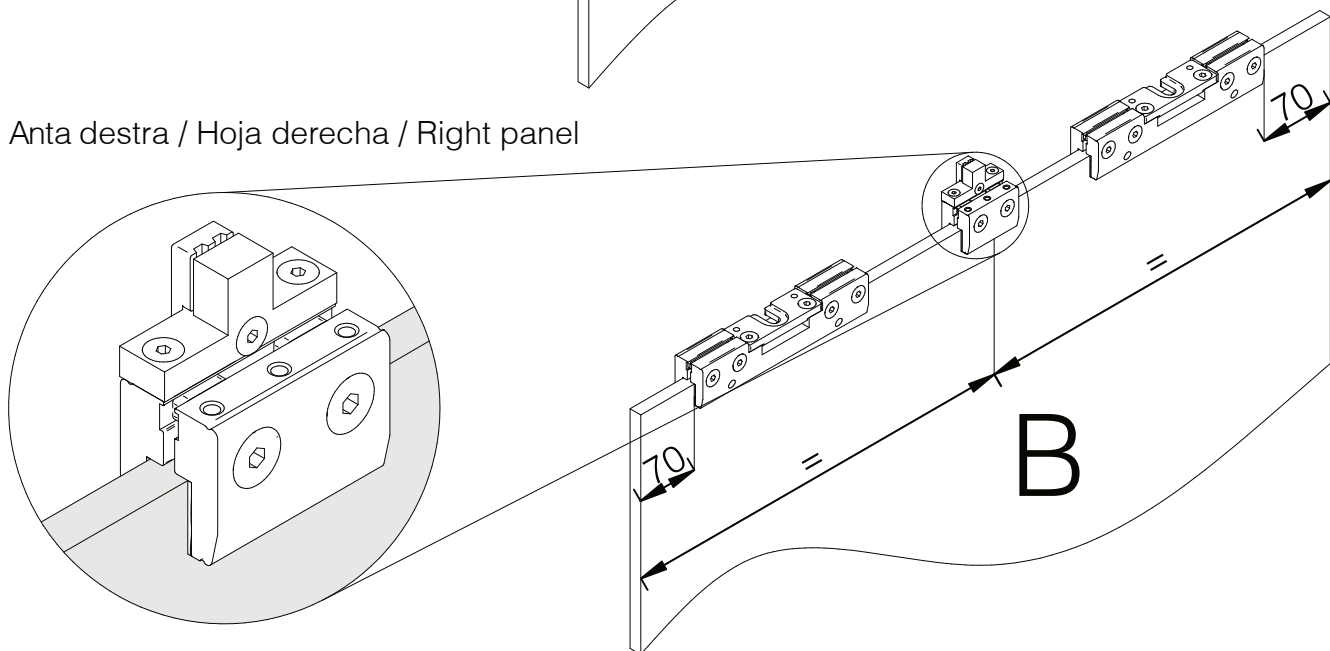


7

Inserire nel binario le 3 contropiastre come da figura
Insertar en el perfil corredero las 3 placas traseras (igual como las imágenes)
Insert in the top track the 3 counterplate as showns

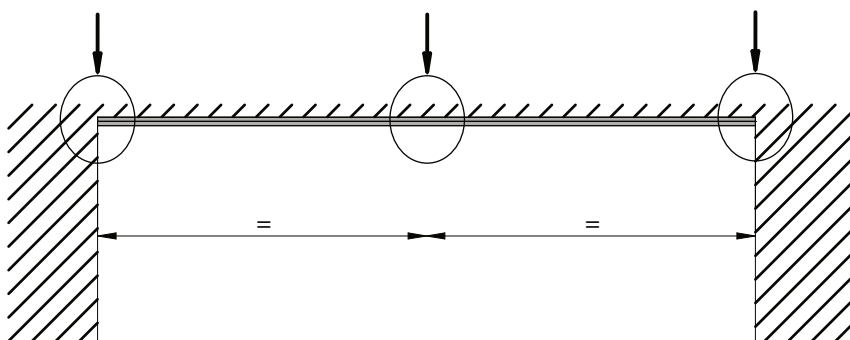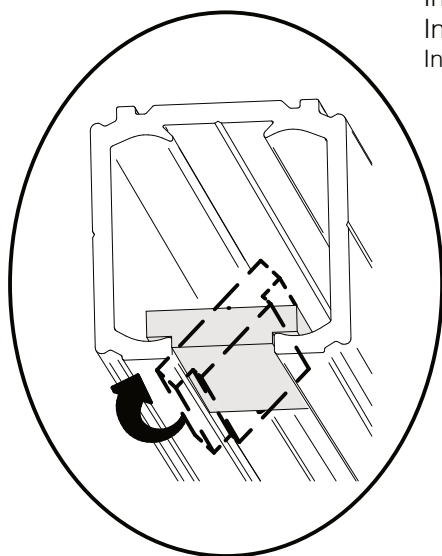


8

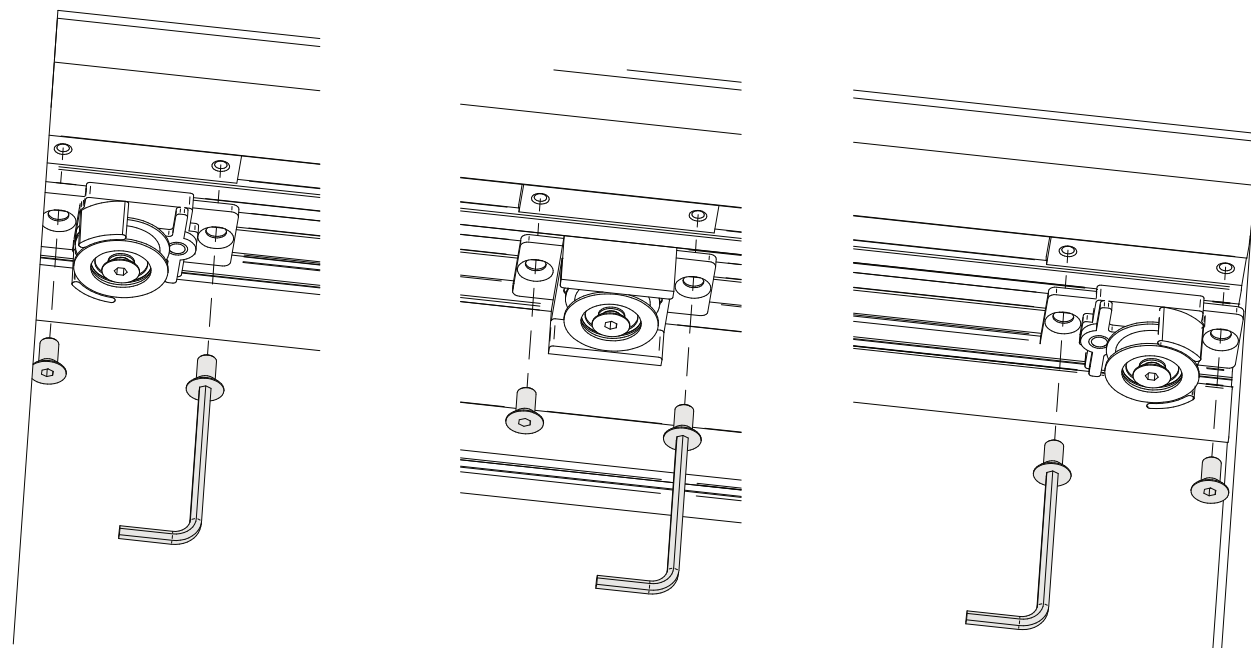


Serrare le rotelle alle piastre - Atornillar las roldanas a las placas - Tighten the rollers to the plates

9a

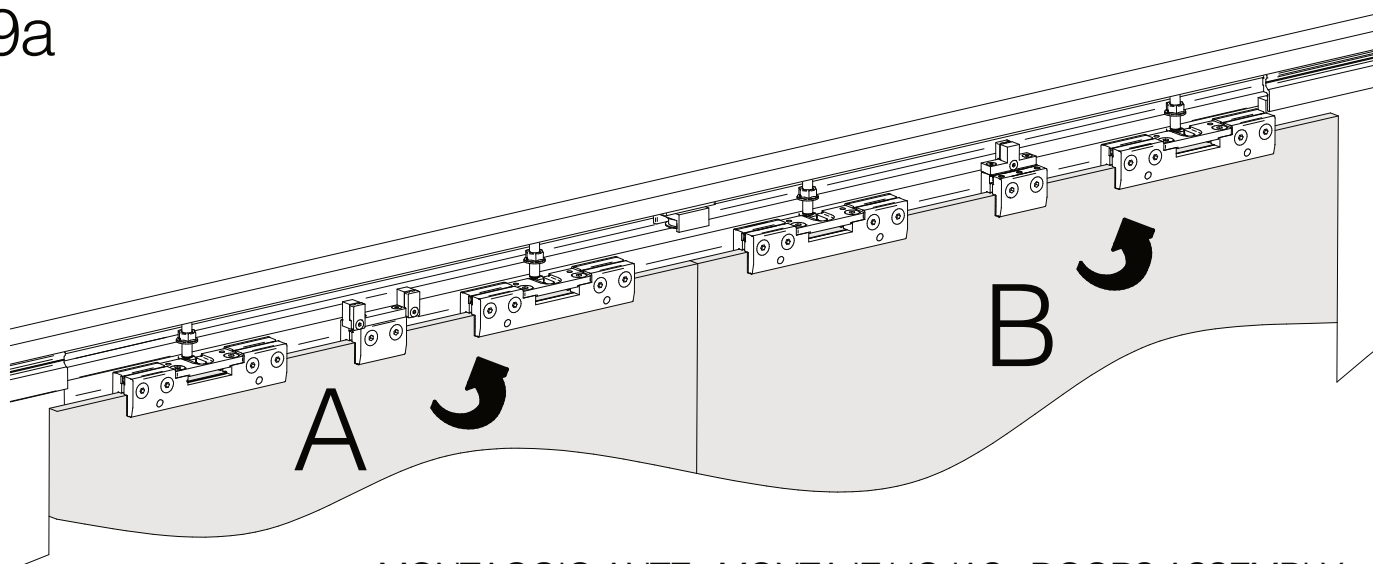

MONTAGGIO ANTE - MONTAJE HOJAS - DOORS ASSEMBLY


9b

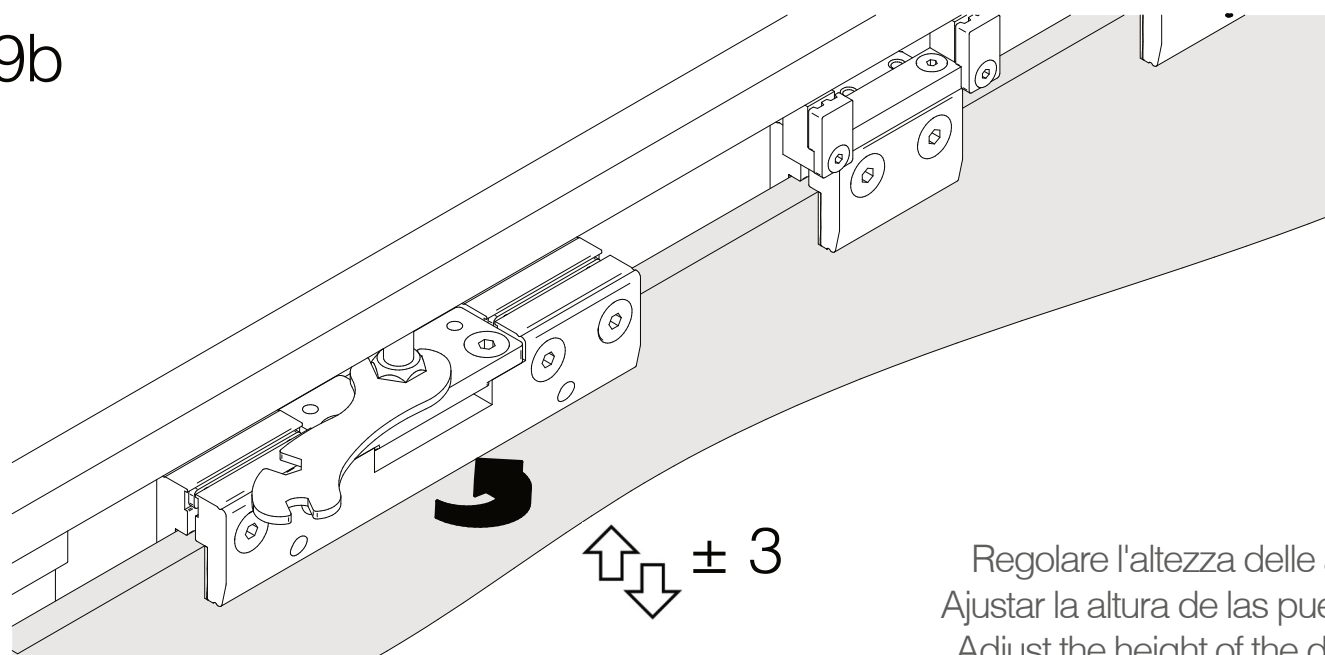


Regolare l'altezza delle ante
Ajustar la altura de las puertas
Adjust the height of the doors

Inserire la cinghia - Insertar la correa dentada - Fit the toothed belt


10a

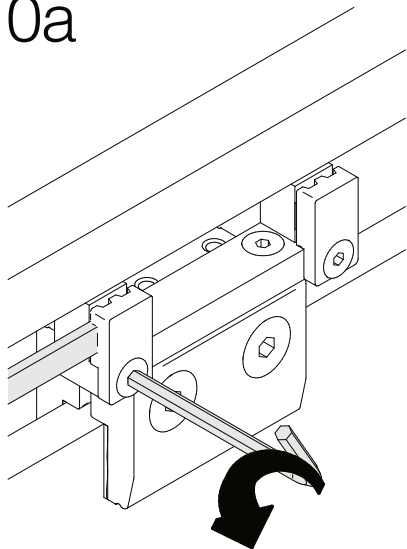


10b

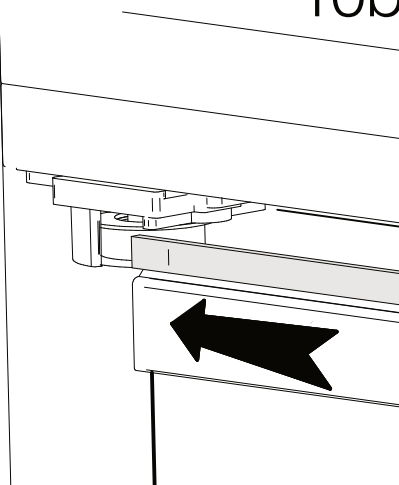


10c

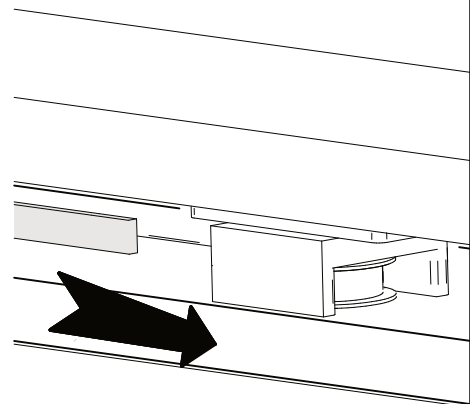


10d

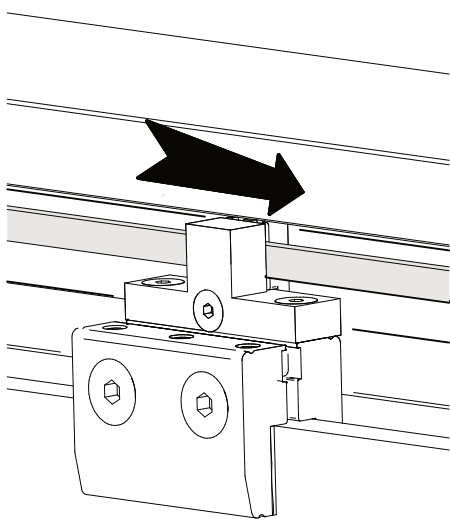

10e

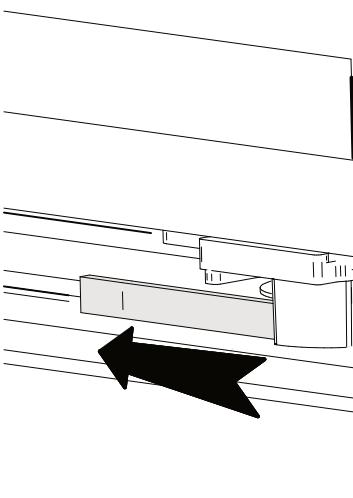


10f

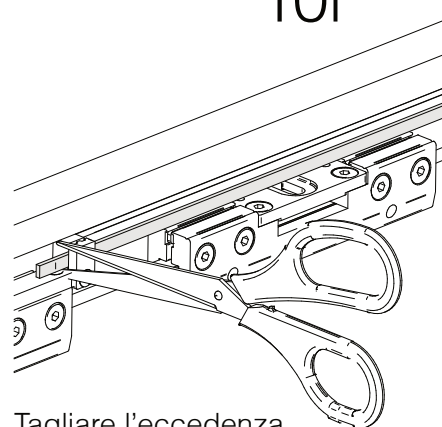


Tagliare l'eccedenza
Cortar el exceso
Cut the excess

11a

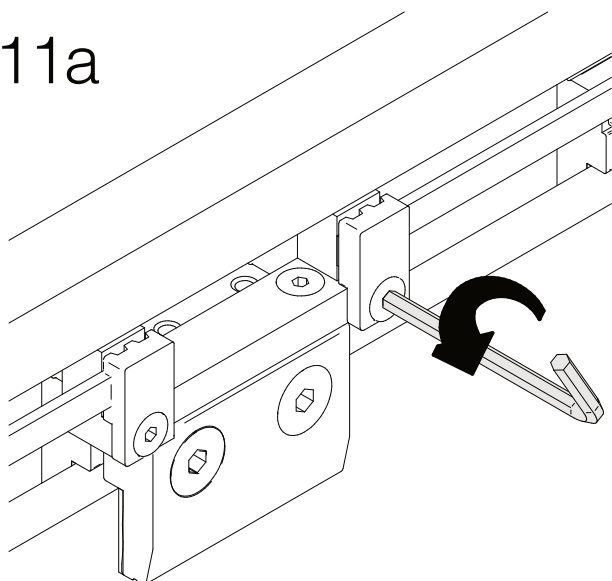

11b

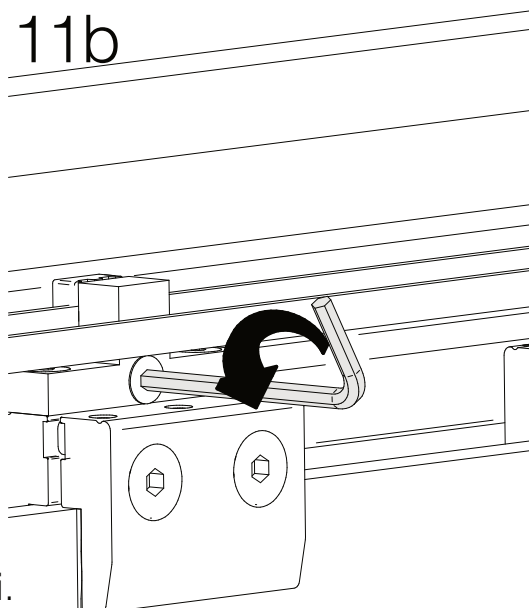

Regolare le ante. Chiuderle. Serrare le viti.
Ajustar las puertas. Cerrarlas. Atornillar el sistema.
Adjust the doors. Close them. Tighten the screws



Mc-Slide s.r.l. - ☎ mcslide.it - ✉ info@mcslide.it
Mc-Slide Spain - ☎ mcslide.es - ✉ info@mcslide.es