


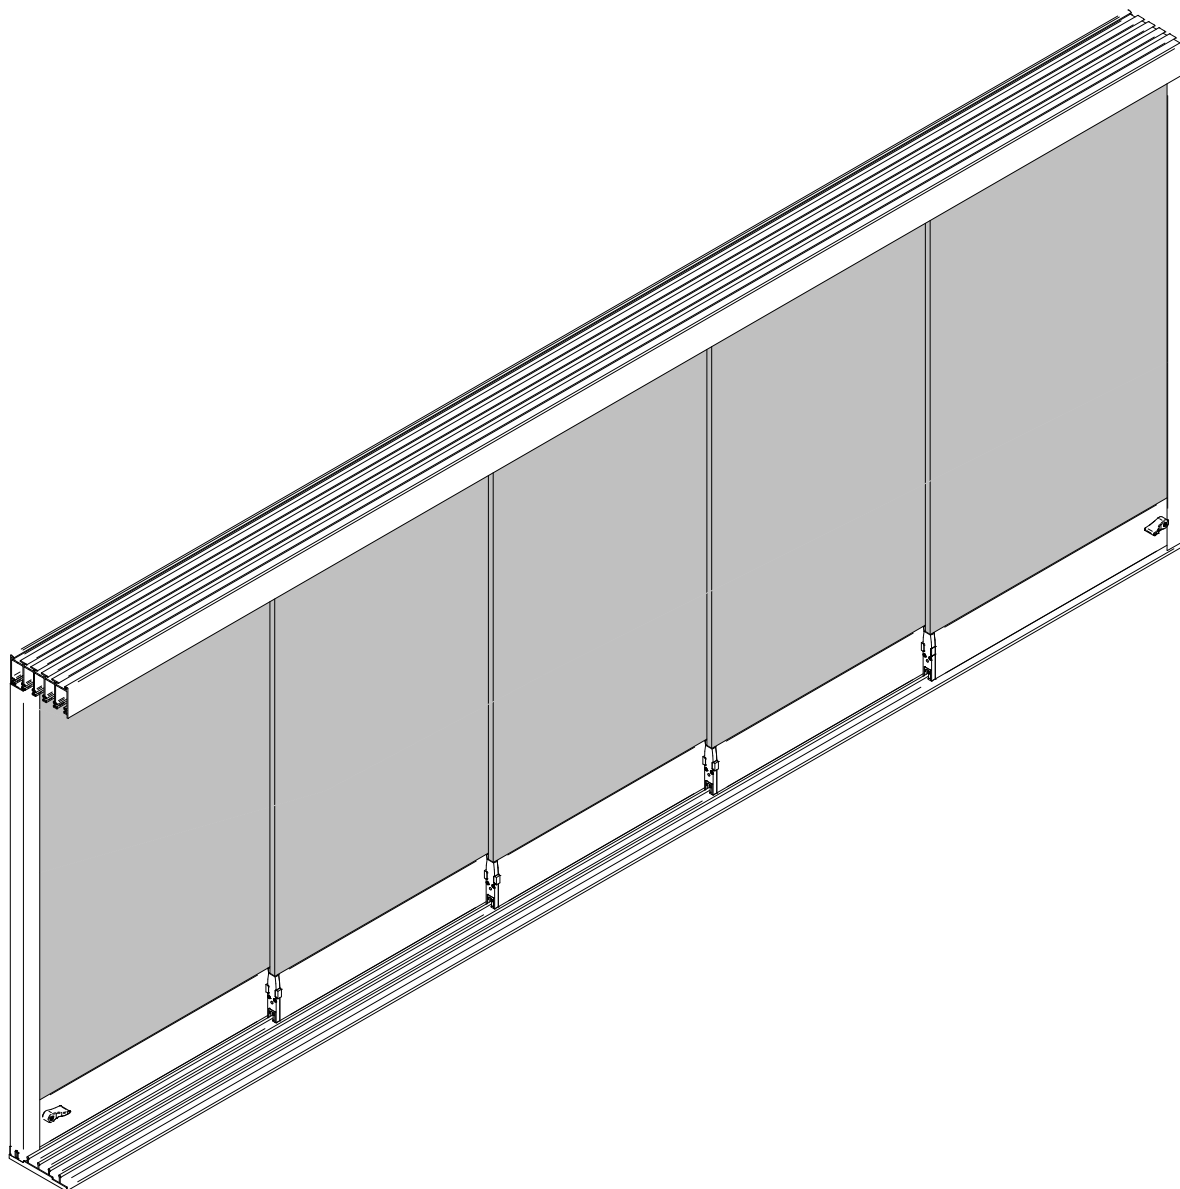

ISTRUZIONI DI MONTAGGIO
INSTRUCCIONES DE MONTAJE
ASSEMBLY INSTRUCTIONS



Max 130 kg



Max 1300



Max 3000



**2 - 3 - 4 - 5 - 6
6 - 8 - 10 - 12**



10 - 55.1 mm



12 mm





± 4 mm



UNI EN 1932:2013 classe 6



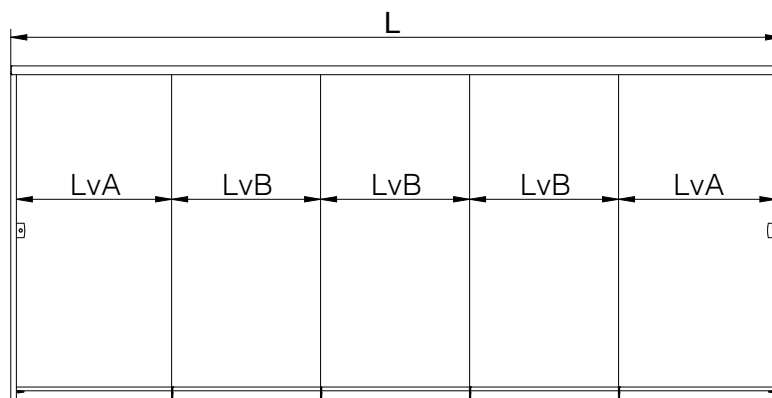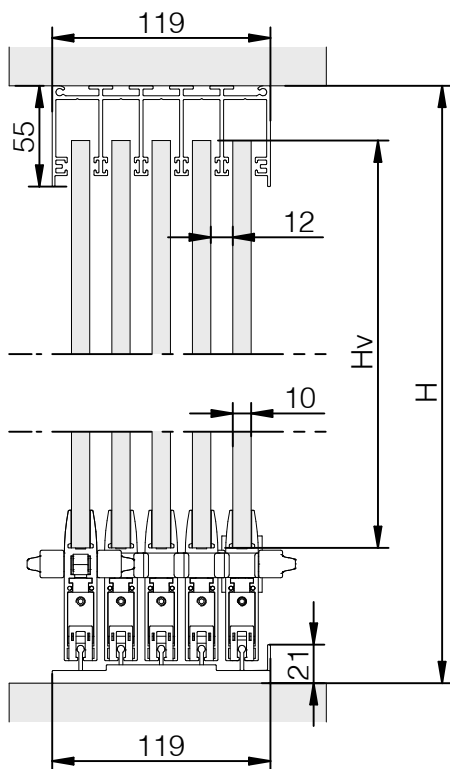

$$LvB = \frac{L - 232}{N} + 13$$

N = numero di ante
number of panels
numero de hojas

$$LvA = LvB + 90$$


$$Hv = H - 104$$

$$LvA = LvA1$$




Profilo superiore

Top profile
Perfil superior

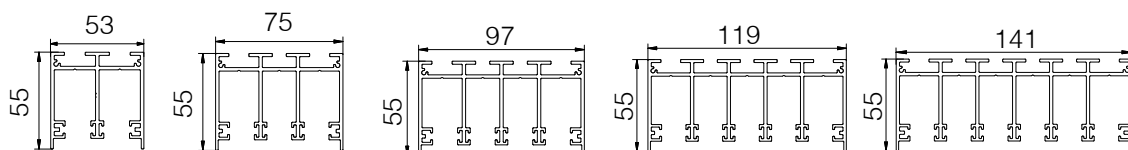


In appoggio

On the floor
Vista




Incassata

Into the floor
Encastrada




Becco d'oca

Goose beak
Pico de oca

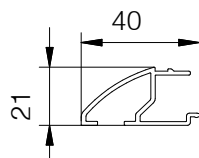


Pro filo pinza

Clamp profile
Perfil pinza





Profilo laterale

Lateral profile
Perfil lateral

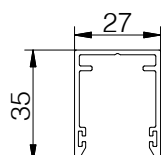

Attrezzi richiesti / Required tool / Herramientas necesarias

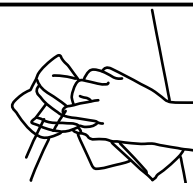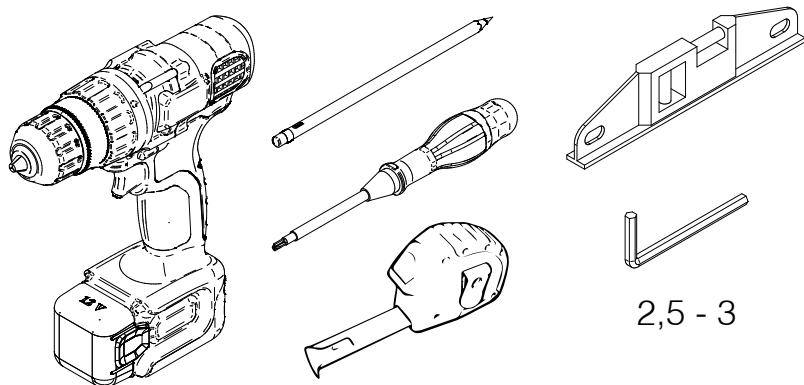

Pulire il vetro ed i profili prima dell'installazione.


Clean the glass and profile before installing.

Limpiar el cristal y los perfiles antes de la instalación.

Componenti - Components - Componentes

Extra
p. 4-6

Basic
P. 7-9

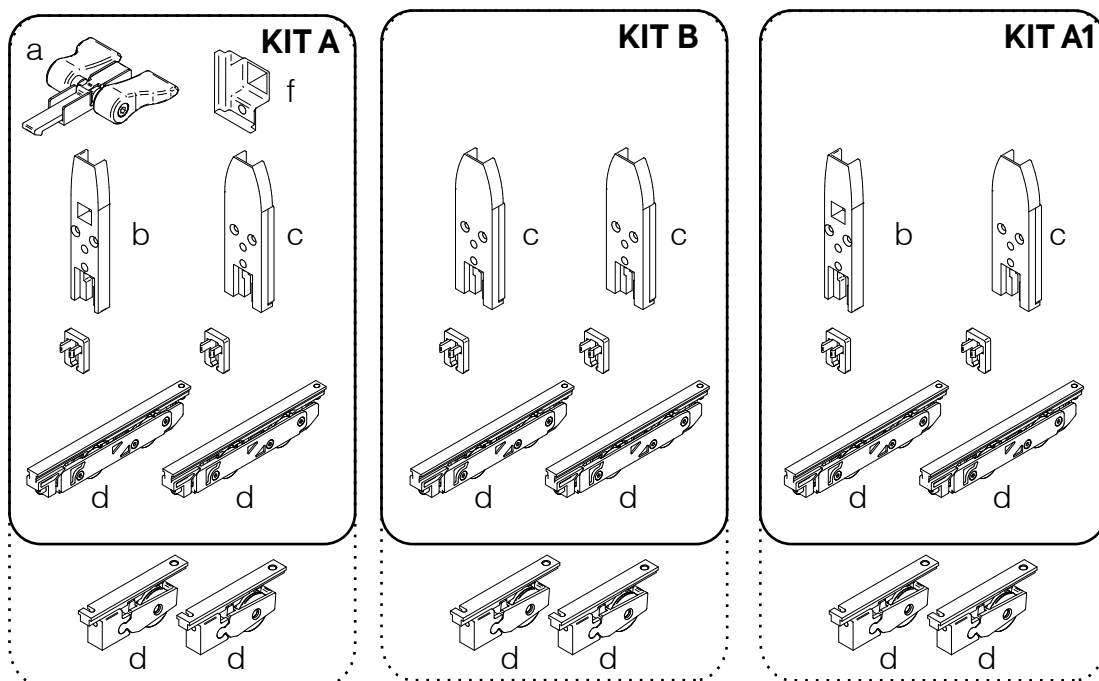

Complementi - Complements - Complementos

Maniglie ad incollare - Handle self adhesive - Tirador con adhesivo

Argento/Silver/Plata
Bianco/White/Blanco
Nero/Black/Negro
Acciaio/Stainless s/Acero



000006678
000006678BI
000006678BL



000006681
000006681BI
000006681BL



-
- MANROUNDBL
- MANROUNDAX

Serrature - Door lock - Serradura

Su montante laterale argento/For vertical beam silver/Para cerrar por piezas laterales plata
Per ante contrapposte argento/For double doors silver/Por hojas opuestas plata



SLD6692AG
000006692AG



SLD6694AG
000006694AG




000006693AG



000006695AG

Contropiastra argento/Counterplate silver/Controplaca plata



1 Assemblaggio pinza anta "A" - Assembly clamps "A" panel - Montaje pinza en hoja "A"

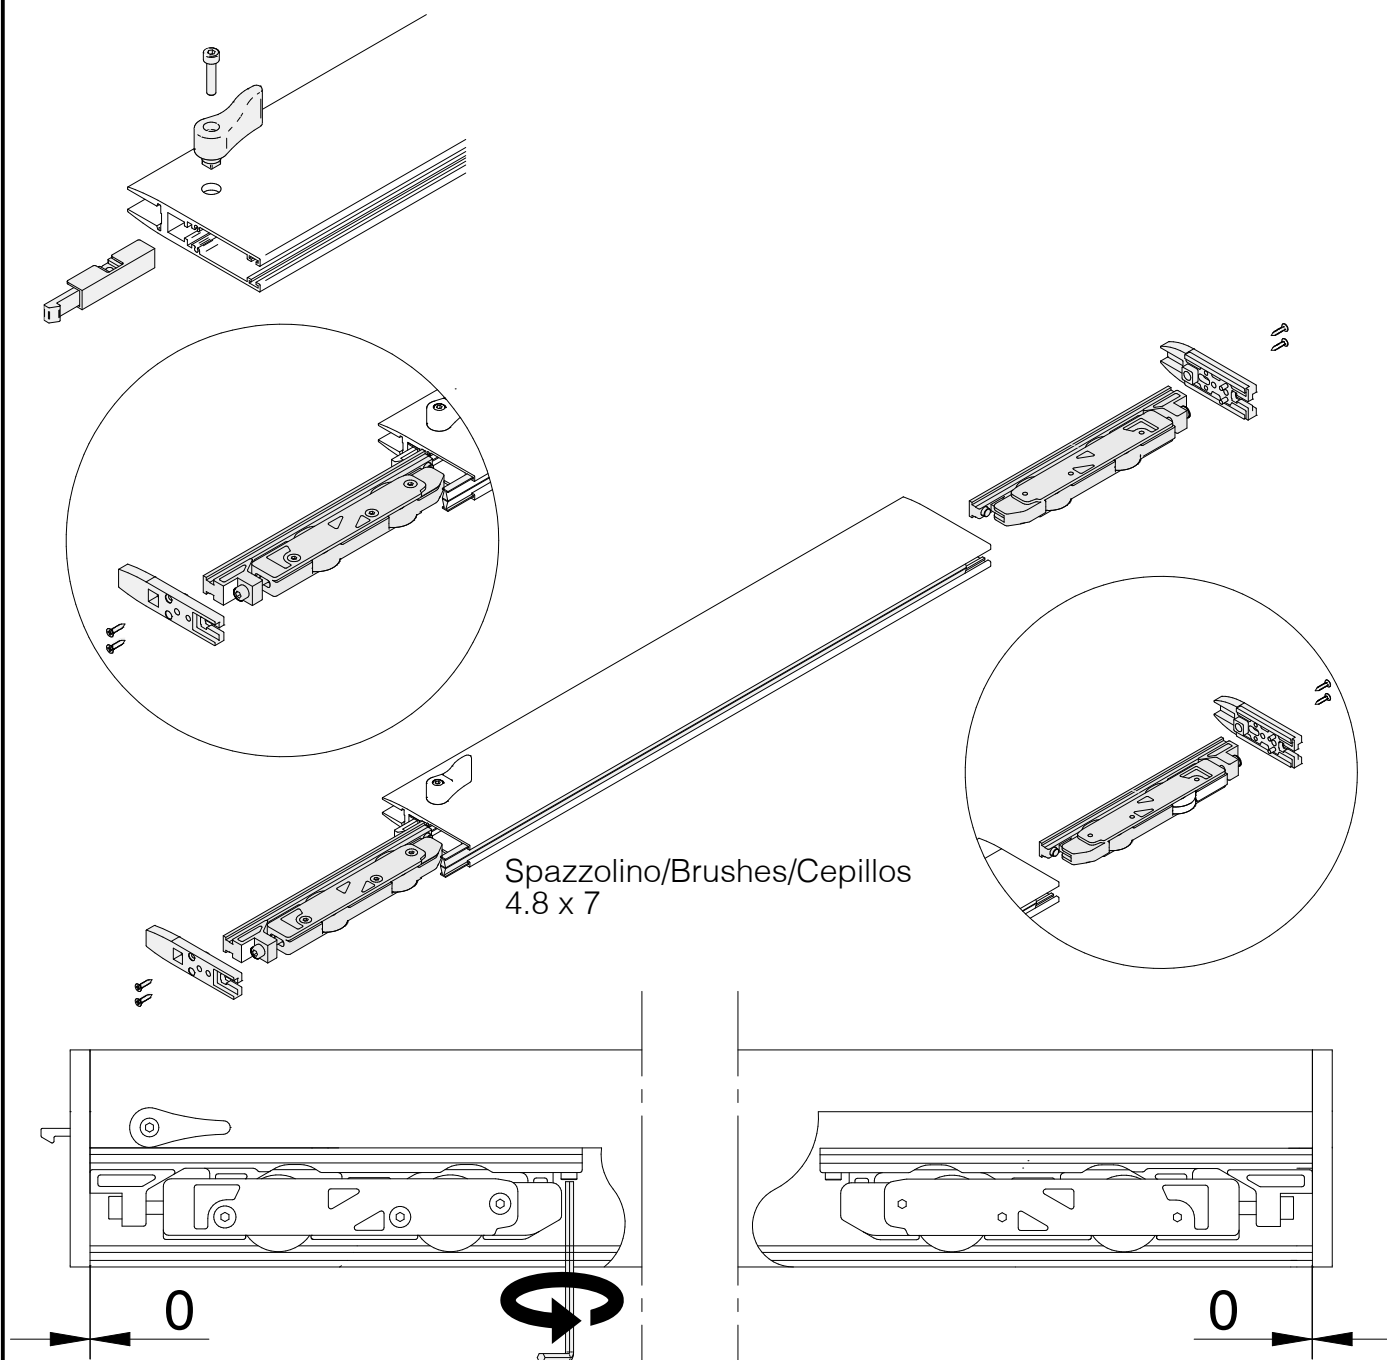

2 Fissaggio pinza anta "A" - Match clamps "A" panel - Fijación pinza en hoja "A"




3 Assemblaggio pinza anta "B" - Assembly clamps "B" panel - Montaje pinza en hoja "B"

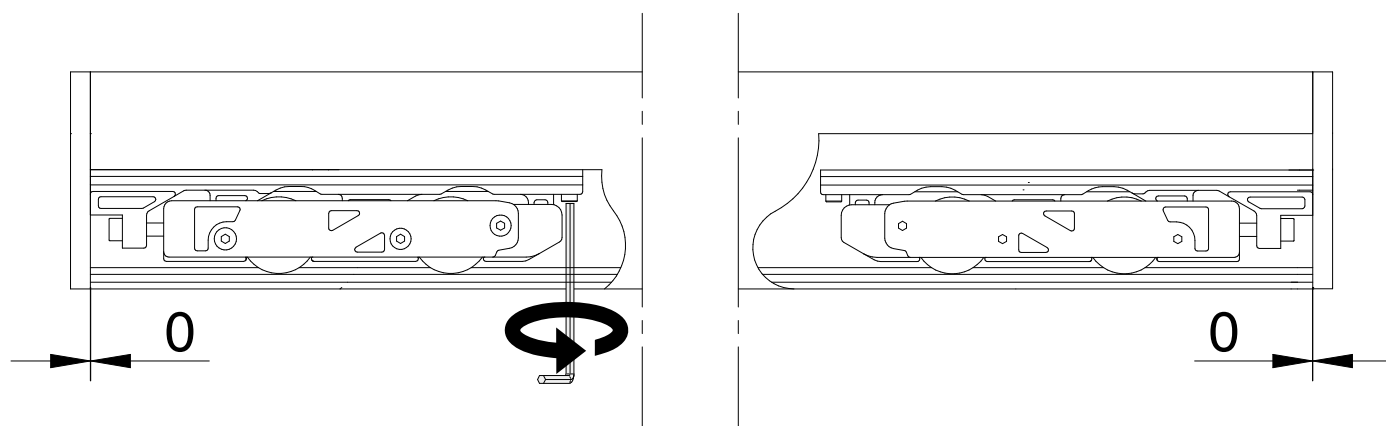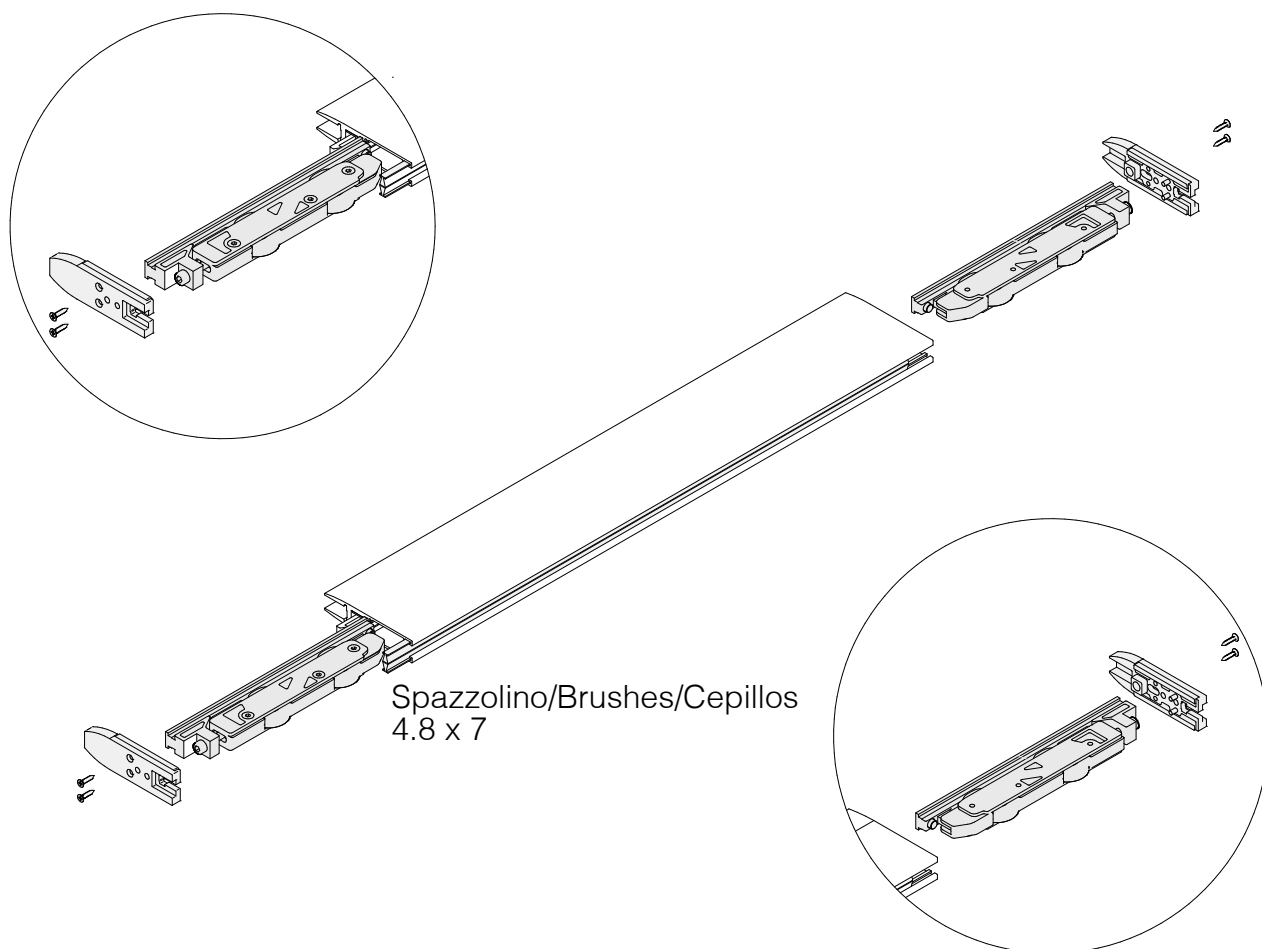

4 Fissaggio pinza anta "B" - Match clamps "B" panel - Fijación pinza en hoja "B"




3a Assemblaggio pinza anta "A1" contrapposta Assembly clamps "A1" panel opposite Montaje pinza en hoja "A1" opuesta

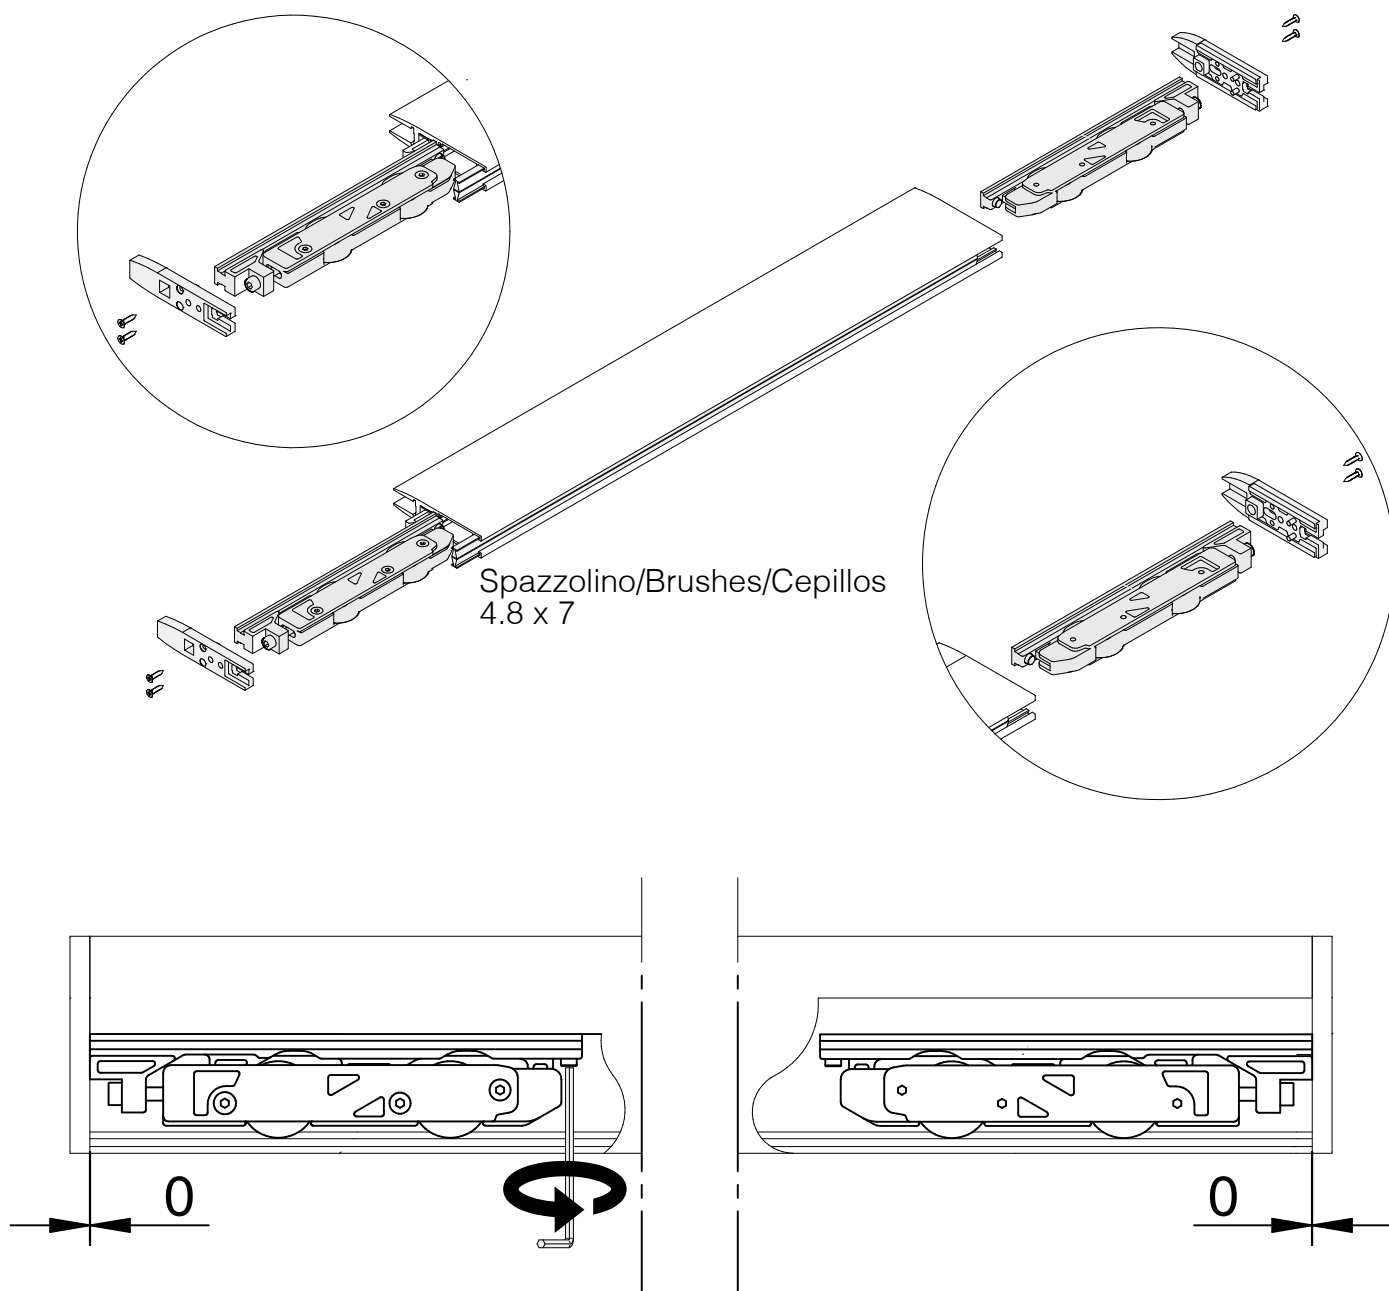

4a Fissaggio pinza anta "A1" - Match clamps "A1" panel - Fijación pinza en hoja "A1"





1 Assemblaggio pinza anta "A" - Assembly clamps "A" panel - Montaje pinza en hoja "A"

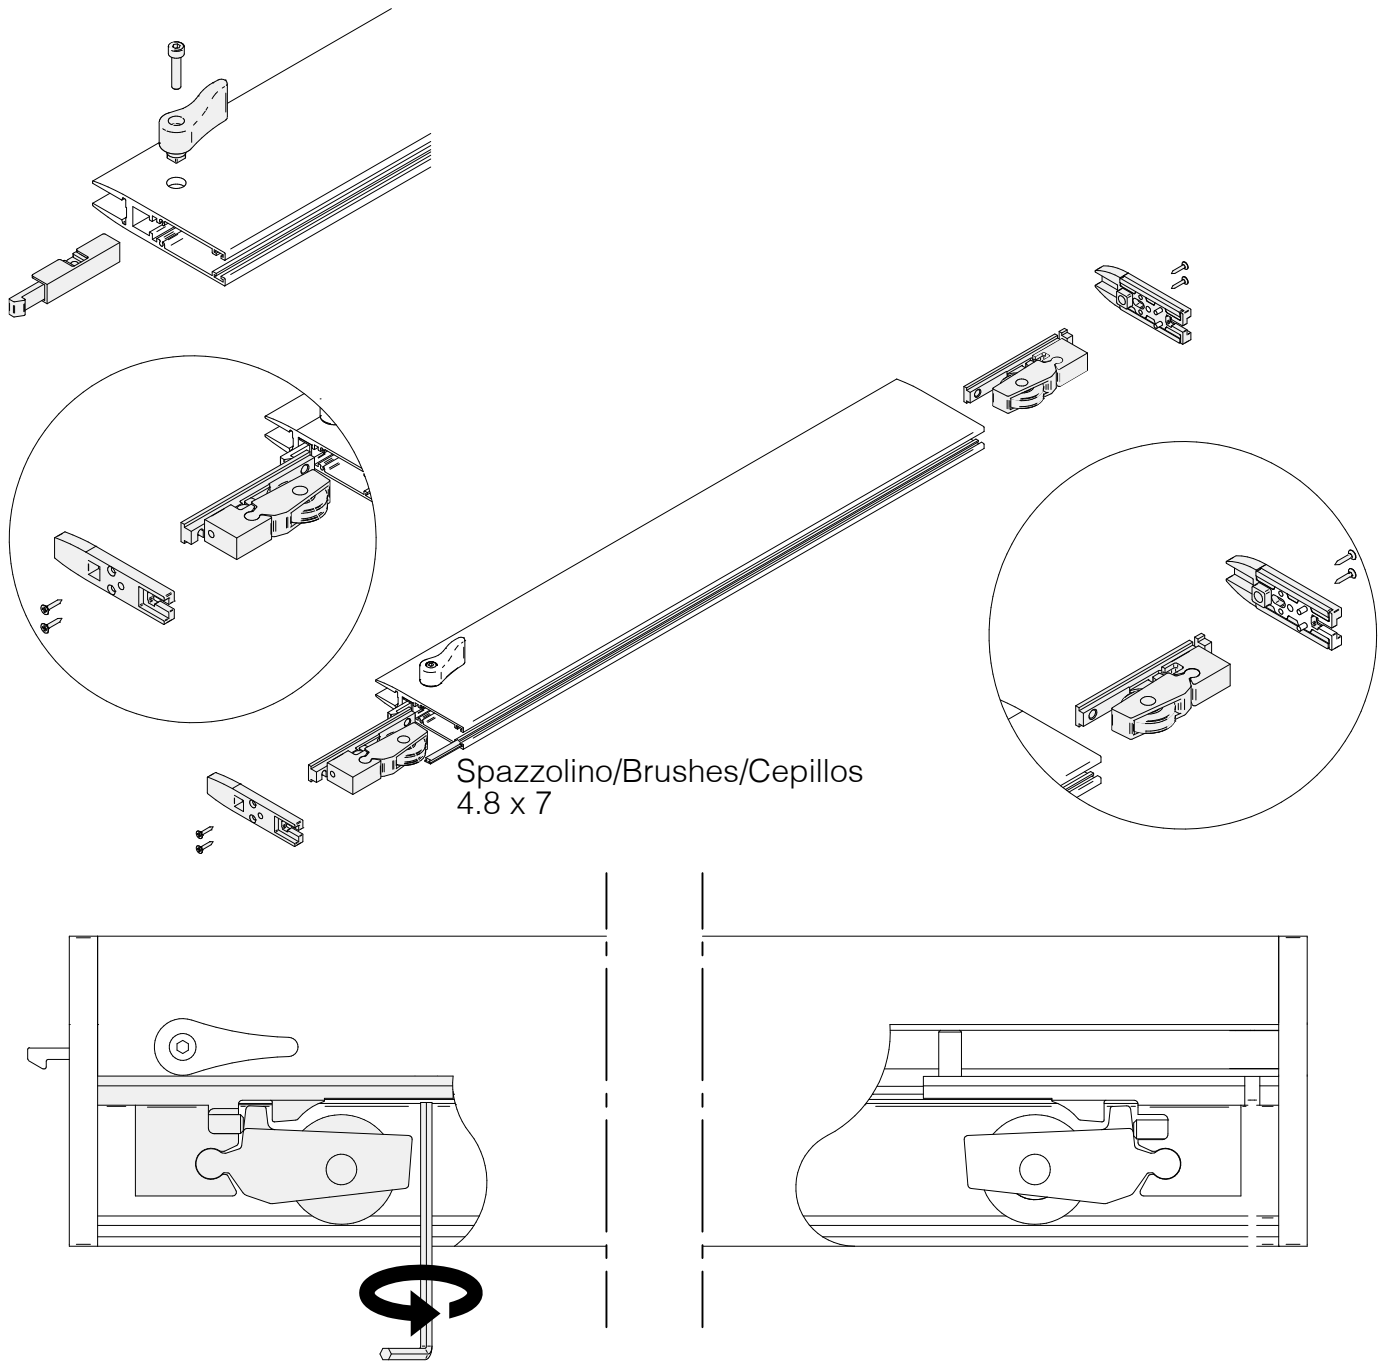

2 Fissaggio pinza anta "A" - Match clamps "A" panel - Fijación pinza en hoja "A"




3 Assemblaggio pinza anta "B" - Assembly clamps "B" panel - Montaje pinza en hoja "B"

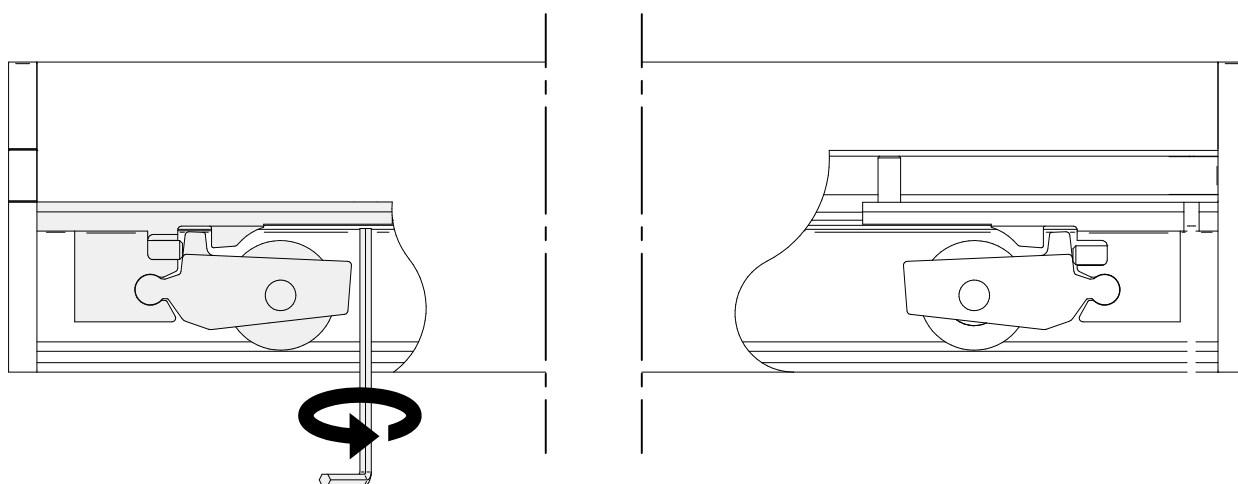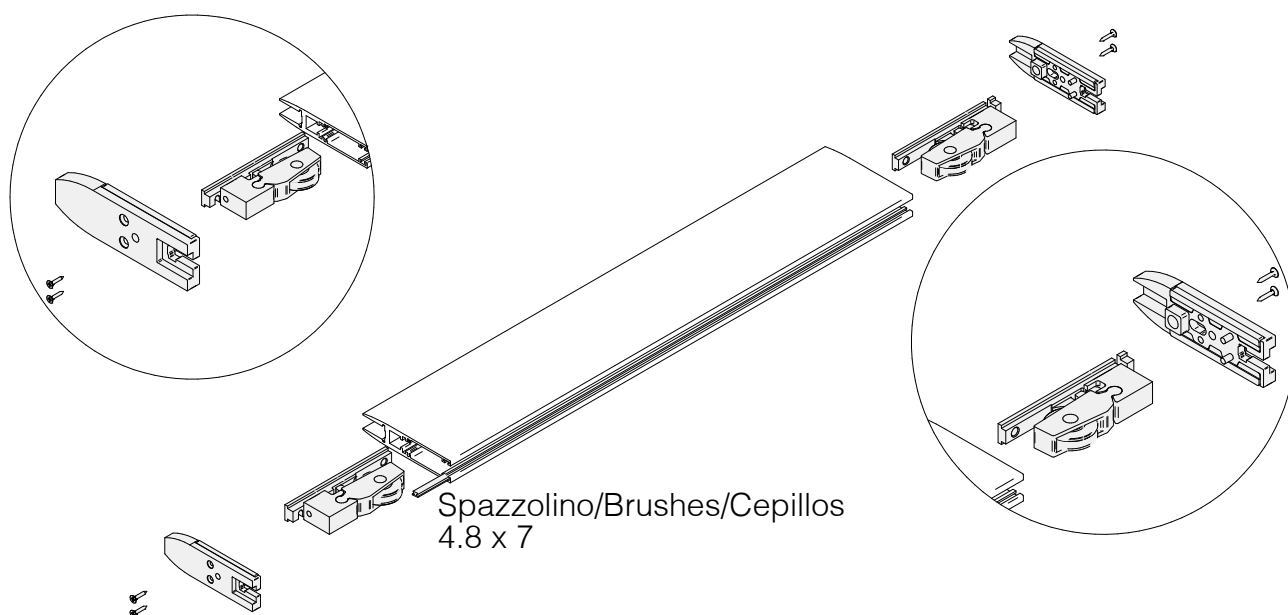

4 Fissaggio pinza anta "B" - Match clamps "B" panel - Fijación pinza en hoja "B"







3a Assemblaggio pinza anta "A1" contrapposta Assembly clamps "A1" panel opposite Montaje pinza en hoja "A1" opuesta

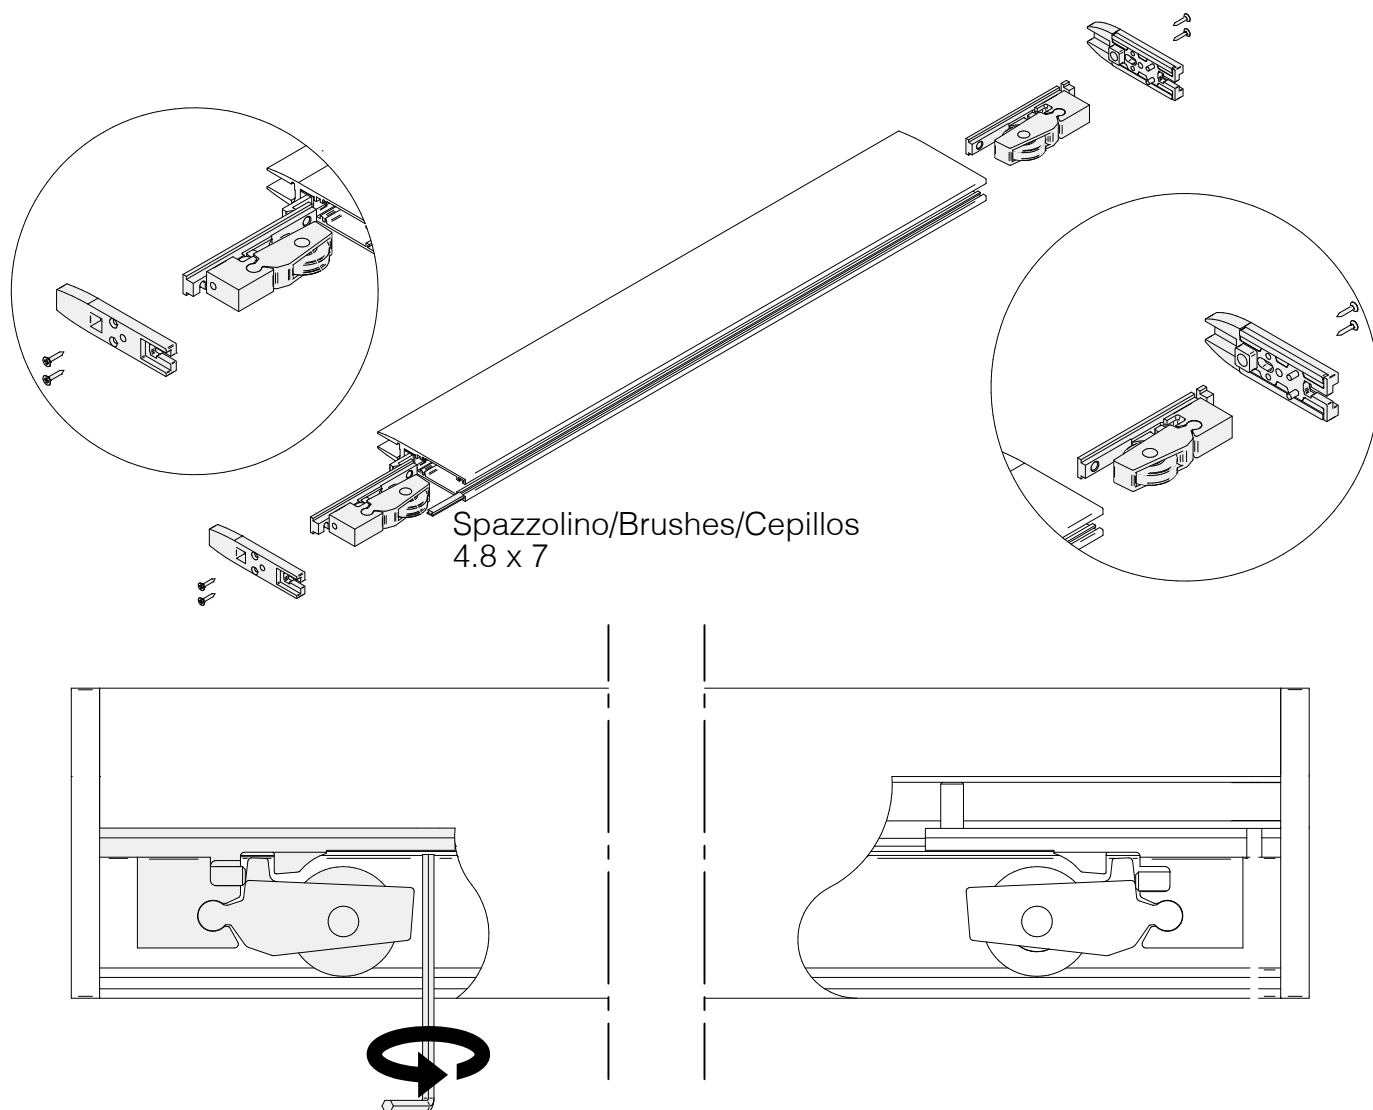


4a Fissaggio pinza anta "A1" - Match clamps "A1" panel - Fijación pinza en hoja "A1"



5a Installazione vaschette laterali - installation water drain trays Instal·ac·i·o·n de bandejas de drenaje de agua

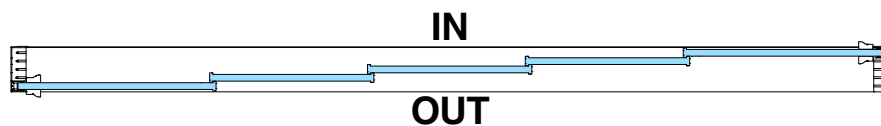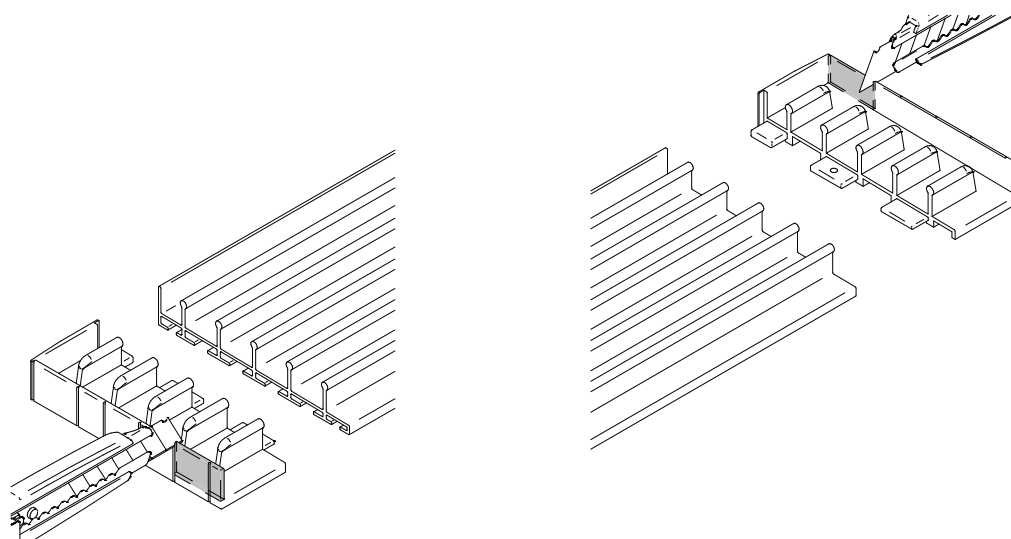
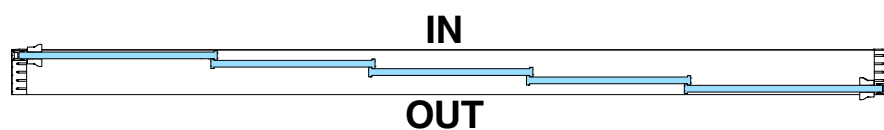
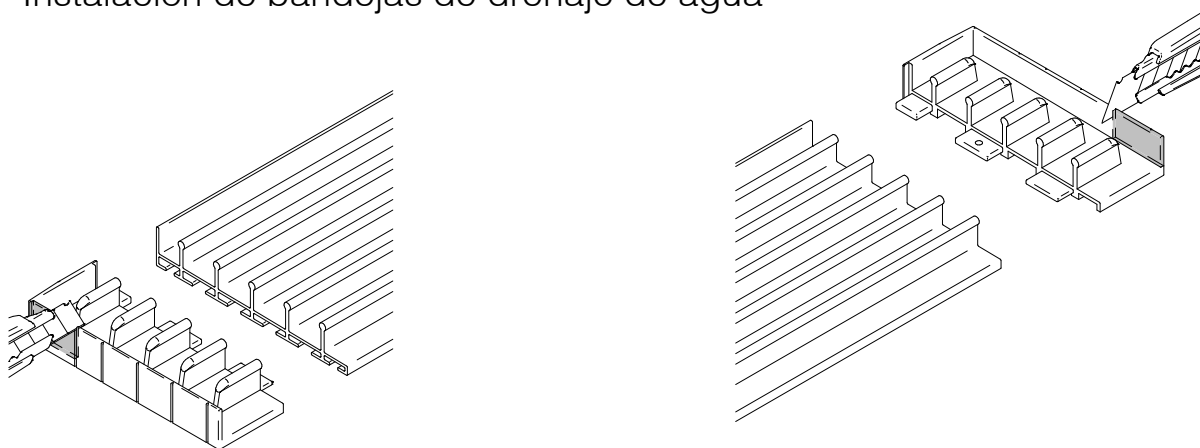


5 Installazione profili Profiles installation - Instalación de los perfi

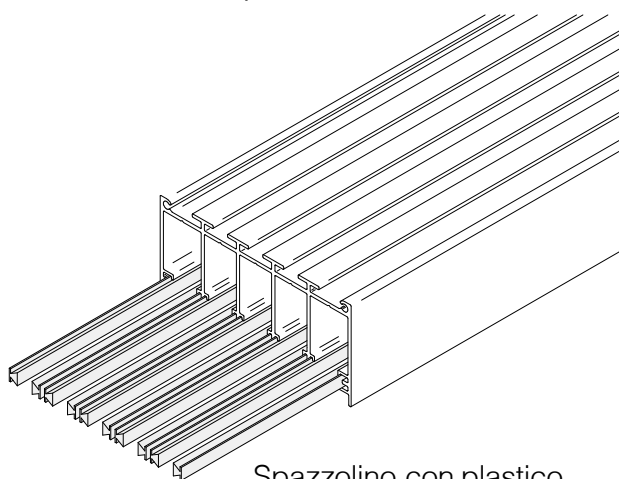

Spazzolino con plastico
Brushes with plastic flap
Cepillos con faldilla
6.9 x 5.5 con plastico






Spazzolino
Brushes
Cepillos
4.8 x 7

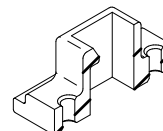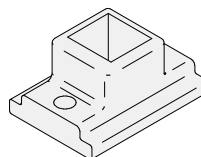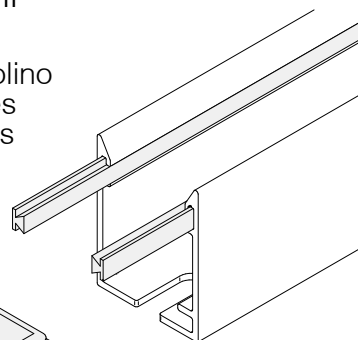

Verificare il verso del gancio prima di fissare il montante laterale



Check the direction of the hook before fixing the side upright

Compruebe la dirección del gancho antes de fijar el lateral en posición vertical.

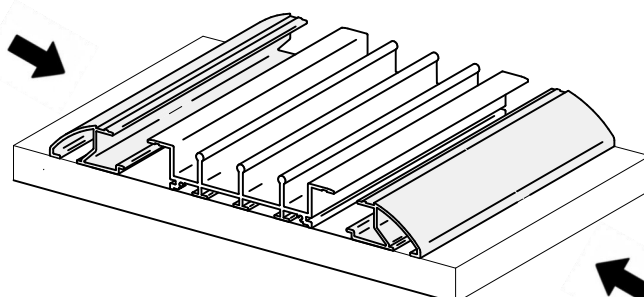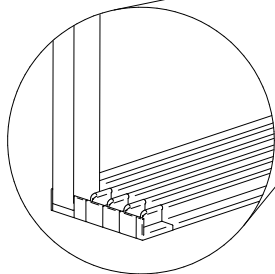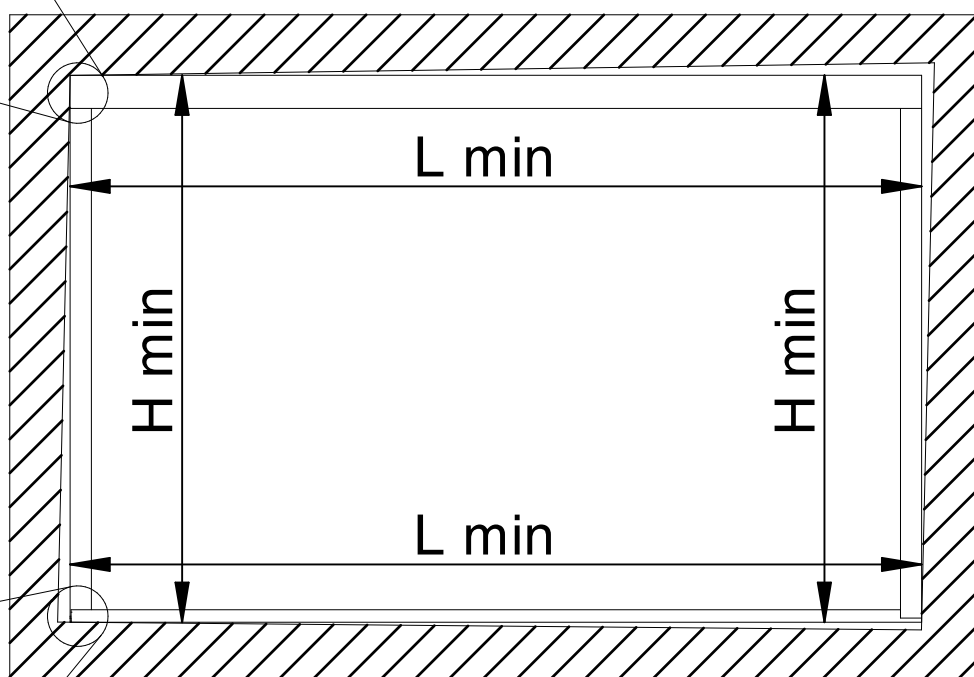
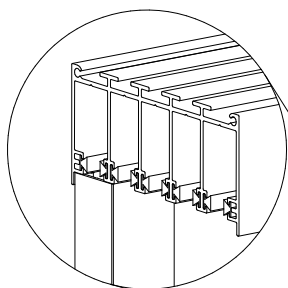


Installazione becco oca/Mounting Goose beak profile/Montaje perfil pico de oca



6 Installazione e regolazione ante - Installation and adjustment of the panels Instalación y ajuste de las hojas

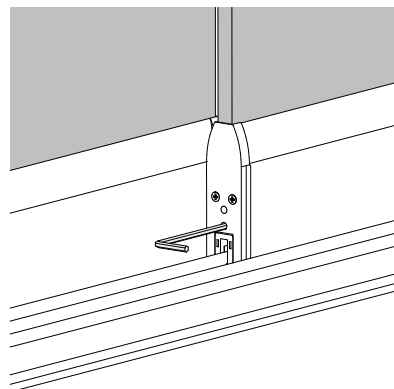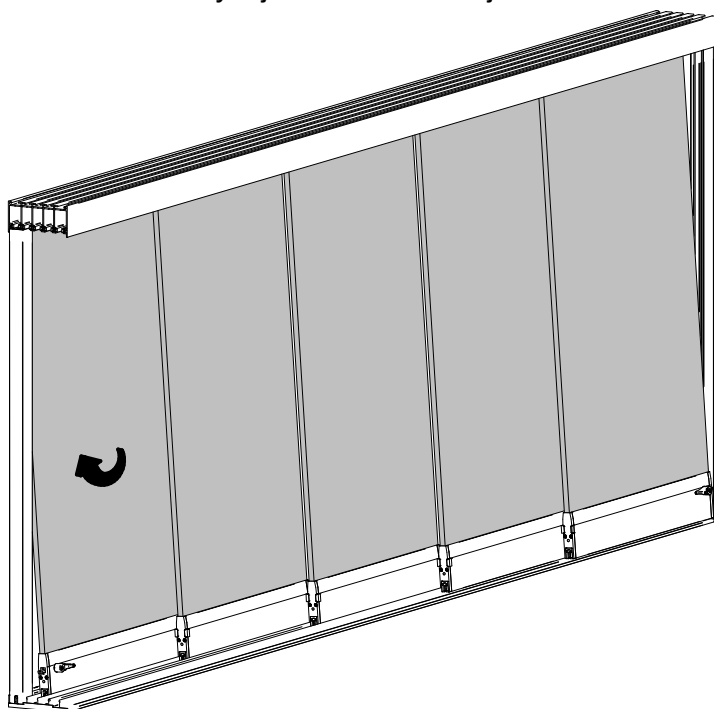

Regolare
Adjust
Regular

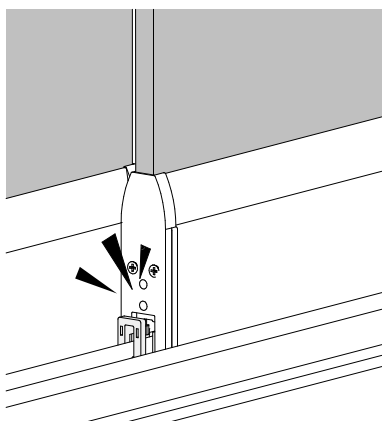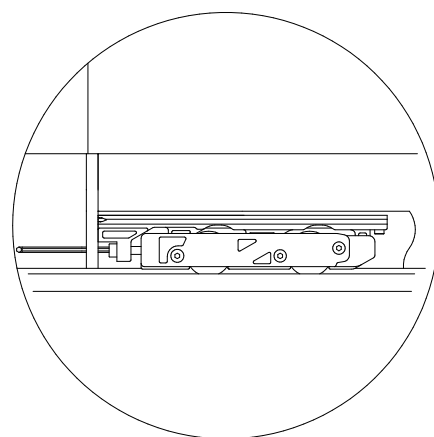

Agganciare l'antiscarrucolamento
Clip the anti-derailment device
Enganchar el sistema de antidescarrilamiento

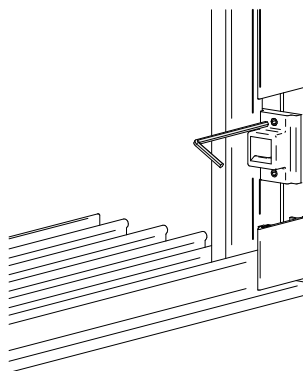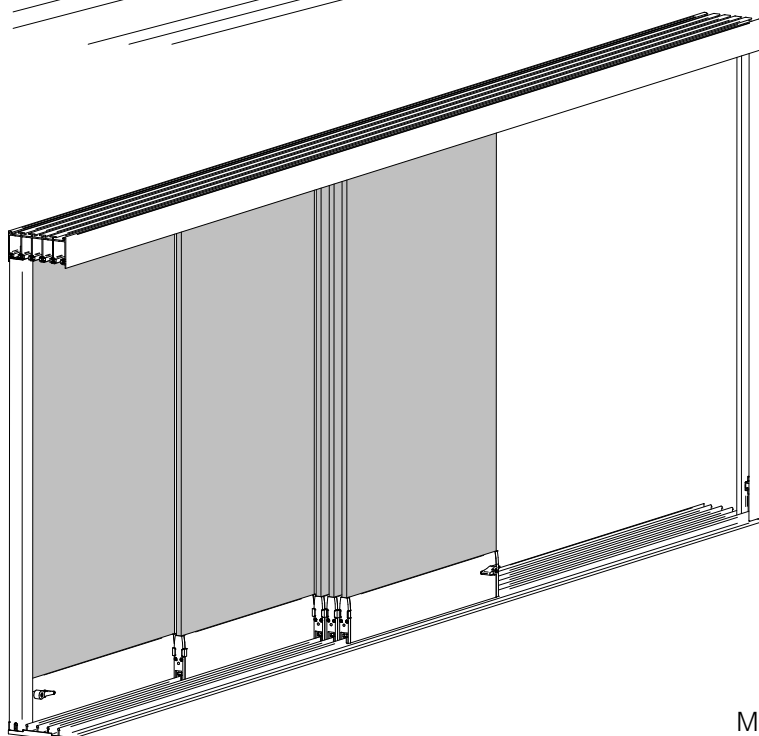

Serrare
Screw
Atornillar



Seguici sui Social Media
Siguenos en redes



Mc-Slide s.r.l. - 📧 [mcslide.it](mailto:info@mcslide.it) - 📧 [mcslide.es](mailto:info@mcslide.es)
Mc-Slide Spain - 📧 [mcslide.es](mailto:info@mcslide.es)